


## Throttle Body Gasket

### Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00 )
2. Remove the engine cover. For additional information, refer to [Engine Cover - 4.0L \(12.30.50\)](#) (Section 501-05)
3. Remove the air intake resonator. For additional information, refer to [Intake Air Resonator \(19.70.03\)](#) (Section 303-12A )
4. Remove the throttle body.
  - ▶ Remove the 4 bolts.
  - ▶ Remove and discard the throttle body gasket.

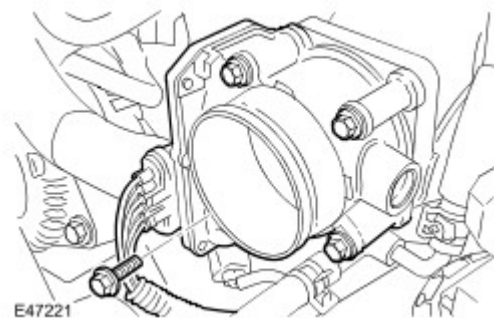

### Installation

1. Install the throttle body.
  - ▶ Clean the components.
  - ▶ Install a new gasket.
  - ▶ Tighten the 4 bolts to 10 Nm (7 lb.ft).
2. Install the air intake resonator. For additional information, refer to [Intake Air Resonator \(19.70.03\)](#) (Section 303-12A )
3. Install the engine cover. For additional information, refer to [Engine Cover - 4.0L \(12.30.50\)](#) (Section 501-05)
4. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00 )