




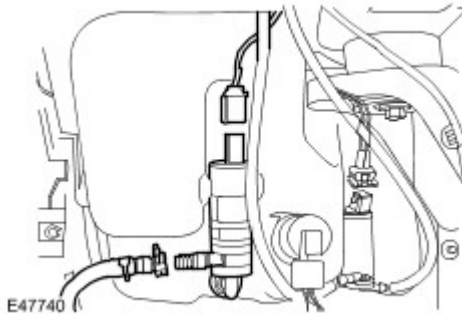
## Headlamp Washer Pump (84.20.21)

### Removal

1.  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**

Raise and support the vehicle.

2. Remove the LH fender splash shield. For additional information, refer to [Fender Splash Shield \(76.10.48\)](#) (Section 501-02)
3. Release the headlamp washer pump hose.
  - ▶ Drain the washer reservoir fluid.
4. Disconnect the headlamp washer pump electrical connector.
5. Remove the headlamp washer pump.
  - ▶ Discard the O-ring seal.



### Installation

1. Install the headlamp washer pump.
  - ▶ Install a new O-ring seal.
2. Connect the headlamp washer pump electrical connector.
3. Connect the headlamp washer pump hose.
4. Install the fender splash shield. For additional information, refer to [Fender Splash Shield \(76.10.48\)](#) (Section 501-02)
5. Lower the vehicle.
6. Top-up the windshield washer reservoir.

