Published : May 4, 2004

Rear Lamp Assembly (86.40.70)

Removal

1.


Open the liftgate and tailgate.

2.

CAUTION: Always protect paintwork and glass when removing exterior components.

Remove the rear lamp assembly.

- Remove the 2 screws.
- Release the 2 clips.
 - Disconnect the electrical connector.

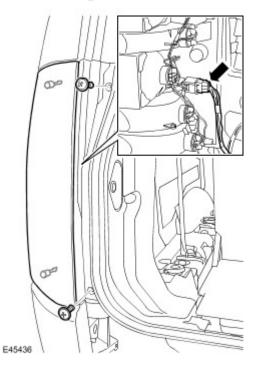

3.

NOTE :

Do not disassemble further if the component is removed for access only.


NOTE :

Note the fitted position.

Remove the wiring harness.

Release the wiring harness from the 2 clips.

- Release the 6 bulb holders.
- Release the electrical connector.

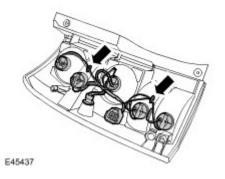

Installation

1. Install the wiring harness.

Install the 6 bulb holders.

Install the electrical connector.

Secure the wiring harness in the clips.

- 2. Install the rear lamp assembly.
 - Sonnect the electrical connector.
 - Secure with the 2 clips.
 - Tighten the screws.
- 3. Close the tailgates.