


Side Turn Signal Lamp (86.40.53)

Removal

1. Remove the side turn signal lamp.
 - ▶ Push the lamp forwards to release it from the door.
 - ▶ Disconnect the electrical connector.

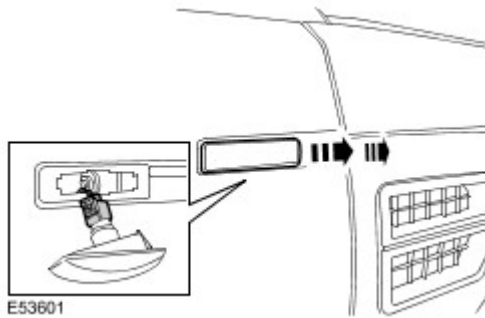

Installation

1. To install, reverse the removal procedure.