


Cooling Fan Shroud (26.25.11)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the air intake resonator. For additional information, refer to (Section 303-12)
3. Remove the upper fan shroud.
 - ▶ Release the coolant expansion hose from the clips.
 - ▶ Release the fan wiring harness clip.
 - ▶ Release the 3 fan shroud clips.

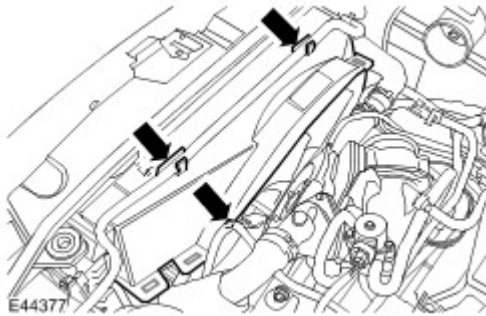

Installation

1. To install, reverse the removal procedure.