Published: Feb 28, 2005




Fluid Pan, Gasket and Filter (44.24.04)

Removal


- 1 . Remove the battery compartment side wall. For additional information, refer to <u>Battery Tray</u> (76.10.30) (Section 414-01)
- 2. WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

- 3 . Remove the exhaust system. For additional information, refer to Exhaust System (30.10.08) (Section 309-00)
- 4 · Remove the transmission heat shield.
 - Remove the 4 bolts.

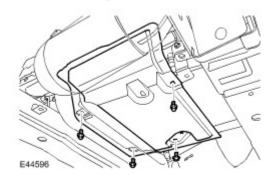


5. Release the selector cable from its abutment bracket.

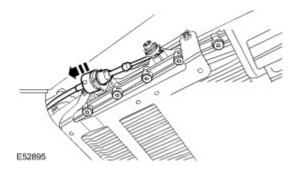


6. Remove the transmission heat shield bracket.


Remove the 4 bolts.

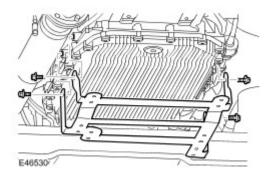

- 7. Drain the transmission. For additional information, refer to (Section 307-01B)
- 8. Raise the RH side of the engine by approximately 40 mm.
 - Use a transmission jack.
 - Remove the 2 bolts.

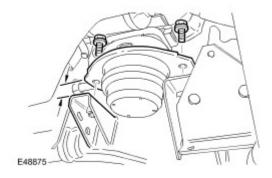

- 9. Remove the fluid pan.
 - Position a container to collect the fluid spillage.
 - Remove the 21 Torx screws.
 - Remove and if necessary, discard the seal.
 - Discard the O-ring seal.

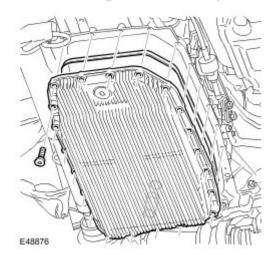

Installation

- 1. Install the fluid pan.
 - Clean the components.
 - Install the seal.
 - Install a new O-ring seal.
 - Tighten the Torx screws to 8 Nm (6 lb.ft).
- 2. Lower the RH side of engine.
 - Remove the engine support.
 - Tighten the bolts to 45 Nm (33 lb.ft).
- 3. Install the transmission heat shield bracket.
 - Tighten the 4 bolts to 10 Nm (7 lb.ft).
 - Connect the selector cable to its abutment bracket.
- 4. Install the transmission heat shield.
 - Tighten the bolts to 10 Nm (7 lb.ft).
- 5. Install the exhaust system. For additional information, refer to Exhaust System (30.10.08) (Section 309-00)
- 6. Install the battery compartment side wall. For additional information, refer to Battery Tray (76.10.30) (Section 414-01)
- 7. Refill the transmision with fluid. For additional information, refer to (Section 307-01B)