

BRASS HOSE BARB FITTINGS



COUPLER
Hose Barb To
Male Pipe

| PART No. | Hose I.D. | Pipe |
|---------------------|-----------|-------|
| 125-2-10/32 | 1/8 | 10/32 |
| 125-2A | 1/8 | 1/8 |
| 125-2B | 1/8 | 1/4 |
| 125-3A | 3/16 | 1/8 |
| 125-3B | 3/16 | 1/4 |
| 125-4A | 1/4 | 1/8 |
| 125-4B | 1/4 | 1/4 |
| 125-4C | 1/4 | 3/8 |
| 125-4D | 1/4 | 1/2 |
| 125-5A | 5/16 | 1/8 |
| 125-5B | 5/16 | 1/4 |
| 125-5C | 5/16 | 3/8 |
| 125-6A | 3/8 | 1/8 |
| 125-6B | 3/8 | 1/4 |
| 125-6C | 3/8 | 3/8 |
| 125-6D | 3/8 | 1/2 |
| 125-6E | 3/8 | 3/4 |
| 125-8B | 1/2 | 1/4 |
| 125-8C | 1/2 | 3/8 |
| 125-8D | 1/2 | 1/2 |
| 125-8E | 1/2 | 3/4 |
| 125-10C | 5/8 | 3/8 |
| 125-10D | 5/8 | 1/2 |
| 125-10E | 5/8 | 3/4 |
| 125-12D | 3/4 | 1/2 |
| 125-12E | 3/4 | 3/4 |
| 125-16E | 1 | 3/4 |
| 125-16H | 1 | 1 |
| (Cast Brass) | | |
| 125CA-8D | 1/2 | 1/2 |
| 125CA-12E | 3/4 | 3/4 |
| 125CA-16H | 1 | 1 |
| 125CA-20J | 1-1/4 | 1-1/4 |
| 125CA-24K | 1-1/2 | 1-1/2 |
| 125CA-32M | 2 | 2 |



**WORKING SWIVEL
COUPLER**
Hose Barb To
Male Pipe

| PART No. | Hose I.D. | Pipe |
|----------|-----------|------|
| 1925-4B | 1/4 | 1/4 |
| 1925-6B | 3/8 | 1/4 |
| 1925-6C | 3/8 | 3/8 |
| 1925-8C | 1/2 | 3/8 |
| 1925-8D | 1/2 | 1/2 |



COUPLER
Hose Barb To
Female Pipe

| PART No. | Hose I.D. | Pipe |
|----------|-----------|------|
| 126-2A | 1/8 | 1/8 |
| 126-2B | 1/8 | 1/4 |
| 126-3A | 3/16 | 1/8 |
| 126-3B | 3/16 | 1/4 |
| 126-4A | 1/4 | 1/8 |
| 126-4B | 1/4 | 1/4 |
| 126-4C | 1/4 | 3/8 |
| 126-5A | 5/16 | 1/8 |
| 126-5B | 5/16 | 1/4 |
| 126-5C | 5/16 | 3/8 |
| 126-6A | 3/8 | 1/8 |
| 126-6B | 3/8 | 1/4 |
| 126-6C | 3/8 | 3/8 |
| 126-6D | 3/8 | 1/2 |
| 126-8B | 1/2 | 1/4 |
| 126-8C | 1/2 | 3/8 |
| 126-8D | 1/2 | 1/2 |



**SWIVEL
COUPLER**
Hose Barb Flat
Seat With Gasket
To Female
Straight Pipe

| PART No. | Hose I.D. | Straight Pipe |
|----------|-----------|------------------|
| 130-2A | 1/8 | 1/8 |
| 130-3B | 3/16 | 1/4 |
| 130-4A | 1/4 | 1/8 |
| 130-4B | 1/4 | 1/4 |
| 130-4C | 1/4 | 3/8 |
| 130-5C | 5/16 | 3/8 |
| 130-6B | 3/8 | 1/4 |
| 130-6C | 3/8 | 3/8 |
| 130-6D | 3/8 | 1/2 |
| 130-8C | 1/2 | 3/8 |
| 130-8D | 1/2 | 1/2 |
| 130-12E | 3/4 | 3/4 |



**SWIVEL
COUPLER**
Hose Barb Ball
Seat To Female
Straight Pipe

Use With PART No. 134

| PART No. | Hose I.D. | Straight Pipe |
|----------|-----------|------------------|
| 131-2A | 1/8 | 1/8 |
| 131-3A | 3/16 | 1/8 |
| 131-3B | 3/16 | 1/4 |
| 131-4A | 1/4 | 1/8 |
| 131-4B | 1/4 | 1/4 |
| 131-4C | 1/4 | 3/8 |
| 131-5B | 5/16 | 1/4 |
| 131-6B | 3/8 | 1/4 |
| 131-6C | 3/8 | 3/8 |
| 131-6D | 3/8 | 1/2 |
| 131-8C | 1/2 | 3/8 |
| 131-8D | 1/2 | 1/2 |
| 131-12E | 3/4 | 3/4 |



COUPLER
Hose Barb To
Male 45°
S.A.E. Flare

| PART No. | Hose I.D. | Tube |
|----------|-----------|------|
| 127-44 | 1/4 | 1/4 |
| 127-46 | 1/4 | 3/8 |
| 127-55 | 5/16 | 5/16 |
| 127-66 | 3/8 | 3/8 |
| 127-68 | 3/8 | 1/2 |
| 127-88 | 1/2 | 1/2 |



**SWIVEL
COUPLER**
Hose Barb To
Female 45°
S.A.E. Flare

| PART No. | Hose I.D. | Tube |
|----------|-----------|------|
| 128-34 | 3/16 | 1/4 |
| 128-44 | 1/4 | 1/4 |
| 128-45 | 1/4 | 5/16 |
| 128-46 | 1/4 | 3/8 |
| 128-55 | 5/16 | 5/16 |
| 128-56 | 5/16 | 3/8 |
| 128-66 | 3/8 | 3/8 |
| 128-68 | 3/8 | 1/2 |
| 128-88 | 1/2 | 1/2 |
| 128-810 | 1/2 | 5/8 |
| 128-1010 | 5/8 | 5/8 |
| 128-1212 | 3/4 | 3/4 |



CONNECTOR
Male Straight
Pipe Thread With
Ball Seat To Male
Taper Pipe Thread

Use With PART No. 130, 131

| Straight PART No. | Pipe | Pipe |
|----------------------|------|------|
| 134-AA | 1/8 | 1/8 |
| 134-BA | 1/4 | 1/8 |
| 134-BB | 1/4 | 1/4 |
| 134-BC | 3/8 | 1/4 |
| 134-CC | 3/8 | 3/8 |
| 134-CD | 3/8 | 1/2 |
| 134-DC | 1/2 | 3/8 |
| 134-DD | 1/2 | 1/2 |
| 134-EE | 3/4 | 3/4 |

Straight Pipe
Both Ends

| | | |
|----------|-----|-----|
| 134ST-BB | 1/4 | 1/4 |
| 134ST-CC | 3/8 | 3/8 |



90° ELBOW
Hose Barb
To
Male Pipe

| PART No. | Hose I.D. | Pipe |
|----------|-----------|------|
| 139-3A | 3/16 | 1/8 |
| 139-4A | 1/4 | 1/8 |
| 139-4B | 1/4 | 1/4 |
| 139-4C | 1/4 | 3/8 |
| 139-5A | 5/16 | 1/8 |
| 139-5B | 5/16 | 1/4 |
| 139-5C | 5/16 | 3/8 |
| 139-6A | 3/8 | 1/8 |
| 139-6B | 3/8 | 1/4 |
| 139-6C | 3/8 | 3/8 |
| 139-6D | 3/8 | 1/2 |
| 139-8B | 1/2 | 1/4 |
| 139-8C | 1/2 | 3/8 |
| 139-8D | 1/2 | 1/2 |
| 139-10C | 5/8 | 3/8 |
| 139-10D | 5/8 | 1/2 |
| 139-12D | 3/4 | 1/2 |
| 139-12E | 3/4 | 3/4 |



90° ELBOW
Hose Barb To
Female Pipe

| PART No. | Hose I.D. | Pipe |
|----------|-----------|------|
| 139F-4A | 1/4 | 1/8 |



45° ELBOW
Hose Barb To
Male Pipe

| PART No. | Hose I.D. | Pipe |
|----------|-----------|------|
| 140-4A | 1/4 | 1/8 |
| 140-4B | 1/4 | 1/4 |
| 140-5A | 5/16 | 1/8 |
| 140-6A | 3/8 | 1/8 |
| 140-6B | 3/8 | 1/4 |
| 140-6C | 3/8 | 3/8 |
| 140-8C | 1/2 | 3/8 |
| 140-10C | 5/8 | 3/8 |

C
4