

Exterior Mirror (76.11.10)

Removal

1. Remove the front door trim panel. For additional information, refer to [Front Door Trim Panel \(76.34.01\)](#) (Section 501-05)
2. Remove the exterior rear view mirror.
 - ▶ Disconnect the electrical connectors.
 - ▶ Remove the 3 bolts.



Installation

1. Install the exterior rear view mirror.
 - ▶ Tighten the bolts to 6 Nm (4 lb.ft).
 - ▶ Connect the electrical connectors.
2. Install the front door trim panel. For additional information, refer to [Front Door Trim Panel \(76.34.01\)](#) (Section 501-05)