


Suspension Height Sensor (60.36.01)

Removal

NOTE:

The right hand sensor has a black colored lever and the left hand sensor has a white colored lever.

1.  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**


Raise and support the vehicle.

2. Remove the wheel and tire.

3.  **CAUTION: Do not use excessive force to disconnect the height sensor link.**


Remove the suspension height sensor.

- ▶ Disconnect the height sensor link arm.
- ▶ Disconnect the electrical connector.
- ▶ Remove the 2 Torx screws.

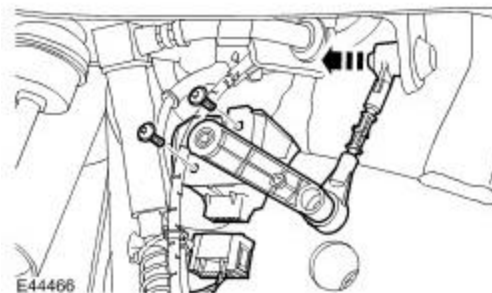

Installation

1. To install, reverse the removal procedure.
 - ▶ Tighten the screws to 2.2 Nm (1.5 lb.ft).

2.  **CAUTION: Height suspension calibration, using T4, must always be carried out if the suspension height sensor fixings are removed.**

Use T4 to re-calibrate the suspension system.