 


# Quick Start

## NAVIGATION SYSTEM



Press the navigation button on the display surround to start the navigation system.

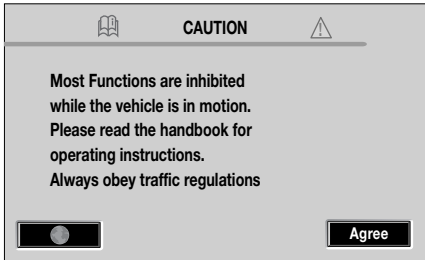 


NAV0003 ENG

Read the caution and touch **Agree**.



From the map screen, touch the **Home** button.

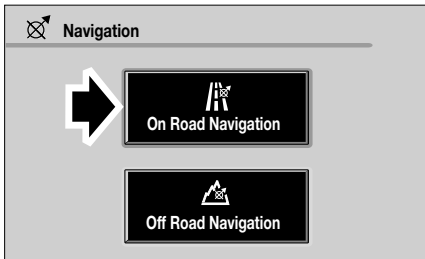


NAV0004 ENG

When the Navigation screen is displayed, touch the **On Road Navigation** button.


The **Off Road Navigation** button will only appear if the enhanced navigation option is part of your vehicle specification.

## SETTING A DESTINATION

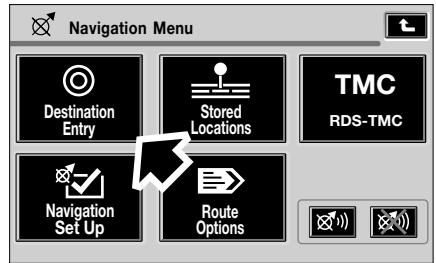 


NAV0170 ENG

 From the Navigation Menu, select '**Destination Entry**'.

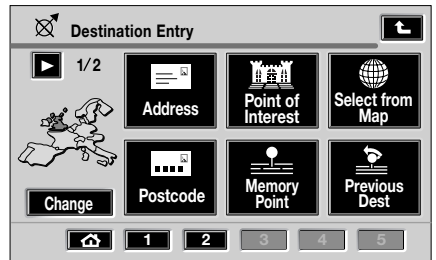

NAV0009 ENG

 The Destination Entry menu provides a choice of methods for entering a destination. For this example, the destination address will be entered. Touch '**Address**'.

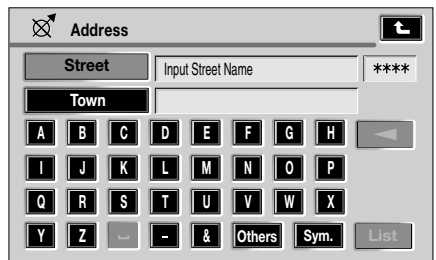

NAV0011 ENG


# Quick Start

 Input the street name of the destination address by touching the letters on the display.

- Delete incorrect letters by touching the arrow to the right of the 'H'.
- Only valid letters are available for selection.


Once enough information is received, the navigation system displays a list of possible addresses. Touch the appropriate address to select.

If necessary, use the scroll buttons to the left of the list to search up or down.

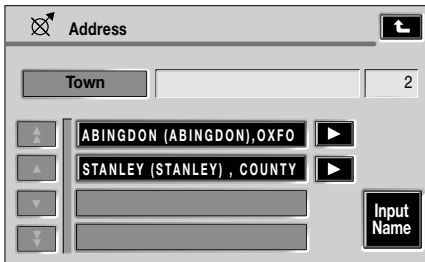

NAV0013 ENG

 Once the street name is entered, a list of locations where that street name exists is displayed. Touch the arrow alongside the appropriate location to select.

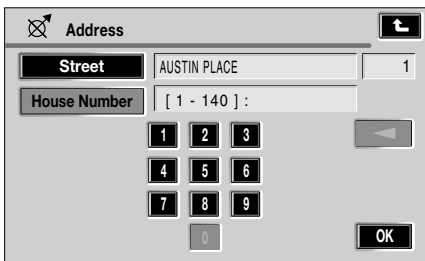


NAV0012 ENG

Enter the house number of the address (if known) then touch 'OK' to confirm.

If the house number is not known, touch 'OK' - the mid-point of the street is then used as the destination.

**Note:** If a list of house number ranges is displayed, select the applicable range and then enter the number.

 The destination details are displayed. If correct, touch 'OK' to confirm.

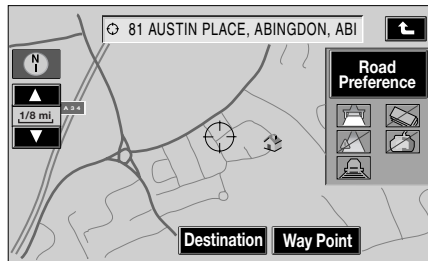


NAV0297 ENG

The map screen showing the destination details and route settings is displayed.

Touch 'Road Preference' to change the route settings or touch 'Destination' to start the route calculation.

# Quick Start

 
## ROUTE PREFERENCE

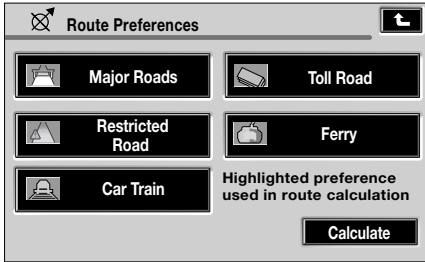

NAV0025 ENG


If 'Road Preference' is selected, touch the desired option(s) and select 'Calculate' to confirm.

## START GUIDANCE

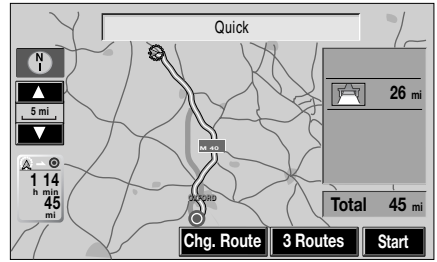 

NAV0365 ENG

 When the system has calculated the route, the map is displayed. Touch 'Start' to initiate navigation guidance.

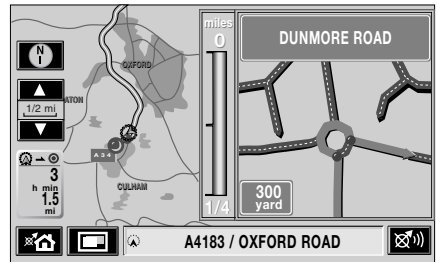

NAV0028 ENG


The route will be highlighted on the map, with an icon showing your current position. The road name/number is also listed in the text area at the bottom of the display.

Drive away, following the voice guidance given by the system. As you approach a junction, in addition to the voice guidance, an inset on the map will display an enlarged view of the junction.

When your destination is reached, voice and visual confirmation is given.

# Quick Start
 
## TELEPHONE SYSTEM

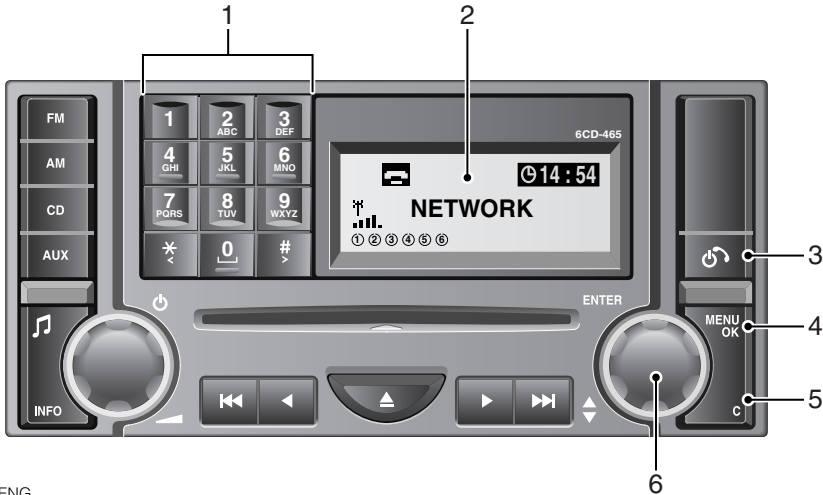

ICE2278 ENG

1. Alphanumeric keypad.
2. Display.
3. Phone button.
4. MENU OK button.
5. Cancel button.
6. Rotary control.

Use of your phone handset while you are driving is dangerous as it diverts attention from the traffic situation. In some countries, use of a phone handset whilst driving is prohibited and in other countries a hands-free unit must be used. If you wish to use your phone handset, stop at an appropriate place where you are not endangering or inconveniencing other vehicles.



### WARNING:

**Using the telephone near the car:**  
Do not telephone inside a garage or near an open car bonnet. The air may contain fuel vapours and the telephone could produce sparks and start a fire.

**Unusual ambient conditions:**  
Switch off the telephone in areas where high explosives are being used. High frequency remote controls could be interfered with and cause an explosion.  
Switch off your telephone in areas with a high explosion risk. This includes filling stations, fuel storage areas or chemical factories, as well as places where the air contains fuel vapour, chemicals or metal dust. The telephone might possibly produce sparks and cause a fire or explosion.

# Quick Start



## WARNING:

### Medical equipment:

**The functioning of cardiac pacemakers or hearing aids may be impaired when the phone is in use. Check with a doctor or manufacturer whether any such devices you or your passengers are using are sufficiently protected against high-frequency energy.**

To enter Phone mode, briefly press the **'Phone'** button (3). To exit Phone mode, briefly press the **'Cancel'** button (5). Visual confirmation of phone operation is given via the Audio system display (2).

***Note:** Various icons and messages appear on the display during phone use. These are described in the relevant areas of this book.*

### Making a call

Activate Phone mode as described previously.

1. Use the alphanumeric keypad (1) to manually enter the phone number to be called. The number or the call recipient's caller ID appears in the Audio system display.

***Note:** If an incorrect digit is entered, press the **'Cancel'** button (5) briefly to delete the last digit. Press and hold the **'Cancel'** button (for approximately 2 seconds) to delete the entire number.*

2. Press the **'Phone'** button (3) briefly to dial the number ('Dialling' appears in the display).

***Note:** Press the **'Cancel'** button briefly to cancel dialling.*

### Answering a call

When an incoming call is received, the number or Caller ID (if entered into the Phone book) will appear in the Audio system display (2) and also in the main message centre in the instrument panel, until the call is either accepted or rejected.

1. Operate the **'Answer call'** switch on the steering wheel, or briefly press either the **'Phone'** button (3) or the **'MENU OK'** button (4), to answer the call.
2. To reject an incoming call, operate the **'End call'** switch on the steering wheel, or briefly press the **'Cancel'** button (5).

To access the Call menu during a call, briefly press the **'MENU OK'** button.

### Ending a call

To end either an incoming or outgoing call, operate the **'End call'** switch on the steering wheel, or briefly press the **'Cancel'** button (5).

### Using menus

Press the **'MENU OK'** button (4) briefly to access the menu relevant to the current phone mode (different menus are available in different modes):

- Press the button when there is no active call to access the Phone menu.
- Press the button during a call to access the Call menu.

Use the rotary control (6) to highlight the chosen menu item, by turning the control clockwise to scroll down or anti-clockwise to scroll up through the menu. Press the control or press the **'Phone'** button (3) to select the highlighted item.

### Redial

1. To view the list of previously dialled numbers, press the **'MENU OK'** button (4).

# Quick Start

2. Use the rotary control (6) to scroll through the list until 'Call register' is highlighted. Press the control to select.
3. Scroll through the list until 'Dialled' is highlighted. Press the rotary control to select.
4. Scroll through the list of dialled numbers until the chosen number is highlighted.
5. Press the rotary control or the 'Phone' button (3), to select and dial the number.

Operate the 'End call' switch, or briefly press the 'Cancel' button (5) to cancel dialling.

## Using the phone book

1. The phone book can either be accessed from the Phone menu, or by turning the rotary control (6) when no calls or menus are active.
2. Use the rotary control to scroll through the phone book until the desired entry is highlighted.
3. Press the rotary control or the 'Phone' button (3) to select and dial the number.

Operate the 'End call' switch, or briefly press the 'Cancel' button (5) to cancel dialling.

**Note:** The phone book can also be accessed when the phone is idle, by pressing either the menu 'Next' or 'Prev' buttons on the steering wheel (see **REMOTE PHONE CONTROLS, 104**). Pressing the 'Next' button will open the phone book at the first entry, pressing the 'Prev' button will open the phone book at the last entry.

## BLUETOOTH OPERATION

### Supported features

- Make a call.
- Receive a call.
- Reject incoming call.
- End active call.

### Unsupported features

- SMS (send and receive texts) via touchscreen.
- Call stacking - e.g. no display of missed calls, SMSs, last called number, call waiting.
- Phone book - e.g. no access to the phone book stored on the phone handset or SIM card.

**Note:** If the phone book is selected when the phone is connected via Bluetooth, 'Memory Empty' will be displayed for approximately 30 seconds.

- Phone charging.
- Hold/Unhold active call.
- No display of Network operator, signal strength or caller ID.

**Note:** Functionality can depend on model/manufacture of your mobile phone. To achieve full functionality, your phone should be docked in the cradle. Optimum signal reception can be achieved while the phone is docked because an external antenna (already fitted to the vehicle) is utilised.

### 'Pairing' your phone to the vehicle

If your mobile phone supports this wireless feature, it will need to be 'Paired' to the vehicle. See **BLUETOOTH OPERATION, 119** for further details. The 'Pairing' process will also be described in your mobile phone instructions.

# Quick Start

**Note:** A maximum of 8 mobile phones can be 'Paired' to the vehicle.

**Note:** If more than one 'Paired' Bluetooth phone is in range, then the system will automatically select the last phone used in Bluetooth mode (if present).

**Note:** A phone docked in the cradle will always take priority over wireless operation. Alternatively, priority can be given to other phones by deselecting Bluetooth mode on your mobile phone.

## **Bluetooth access code**

The four digit access code required for Bluetooth 'Pairing' operation is 2121.

# Quick Start