

Climate control

Note: Using the system for prolonged periods with the air conditioning off can cause the windows to mist.

Air recirculation - manual



Press the button once to activate air recirculation. Press the button a second time to deactivate air recirculation.

Air recirculation prevents air entering from outside, and recirculates the air inside the vehicle.

This prevents the entry of traffic fumes. Air recirculation also significantly influences the dehumidifying and cooling performance of the air-conditioning system.

Note: The windows can mist up if air is recirculated for a prolonged period.

Air recirculation - with pollution sensor



Press the button once to activate air recirculation. Press the button a second time to activate automatic air recirculation. Press the button a third time to switch the system off.

In Auto mode, air recirculation is regulated automatically to enable the air-conditioning system to achieve its optimum performance.

Air recirculation prohibits the entry of air from outside the vehicle, recirculating the air inside the vehicle instead. This is useful to prevent the entry of traffic fumes.

Air recirculation also significantly influences the dehumidifying and cooling performance of the air-conditioning system.

Note: The windows can mist up if air is recirculated for a prolonged period.

Defrost mode



If the windshield is misting or covered in ice, press button, the system will immediately direct its output to achieve maximum screen clearing by:

- Setting the blower speed to an appropriate level.
- Distributing air flow to the screen only.
- Deactivating air recirculation (in certain circumstances).
- Activating the windshield and rear screen heaters (or their timed operating cycle will recommence if they are already switched on).

Press the button a second time (or select **AUTO** or any air distribution control) to switch off the defrost mode. Heated screens will remain on until their time-out period has expired.

Rear environment



The rear environment unit provides climate control to the rear passengers.

- Press the button once to control the rear heating and air conditioning using the front controls only. The lower amber lamp is illuminated.
- Press the button a second time to allow the rear passengers to have manual control. The upper amber light is illuminated.
- Off: press the button a third time to switch off.

Note: Do not obstruct the vent on the side of the rear quarter panel.