


## HEATING CIRCUIT

Two heater lines, supply and return, connect the heater core in the auxiliary climate control assembly to the engine cooling system. The heater lines are routed along the rear crossmember, around the right rear wheel arch and along the RH underside of the vehicle. The heater lines are connected to the engine cooling system at the rear of the engine compartment. The heater lines consist of sections of aluminum alloy pipes, insulated with foam rubber, which are connected together with rubber hose joints. Quick release fittings connect the heater lines to the engine cooling system.

Heater Lines

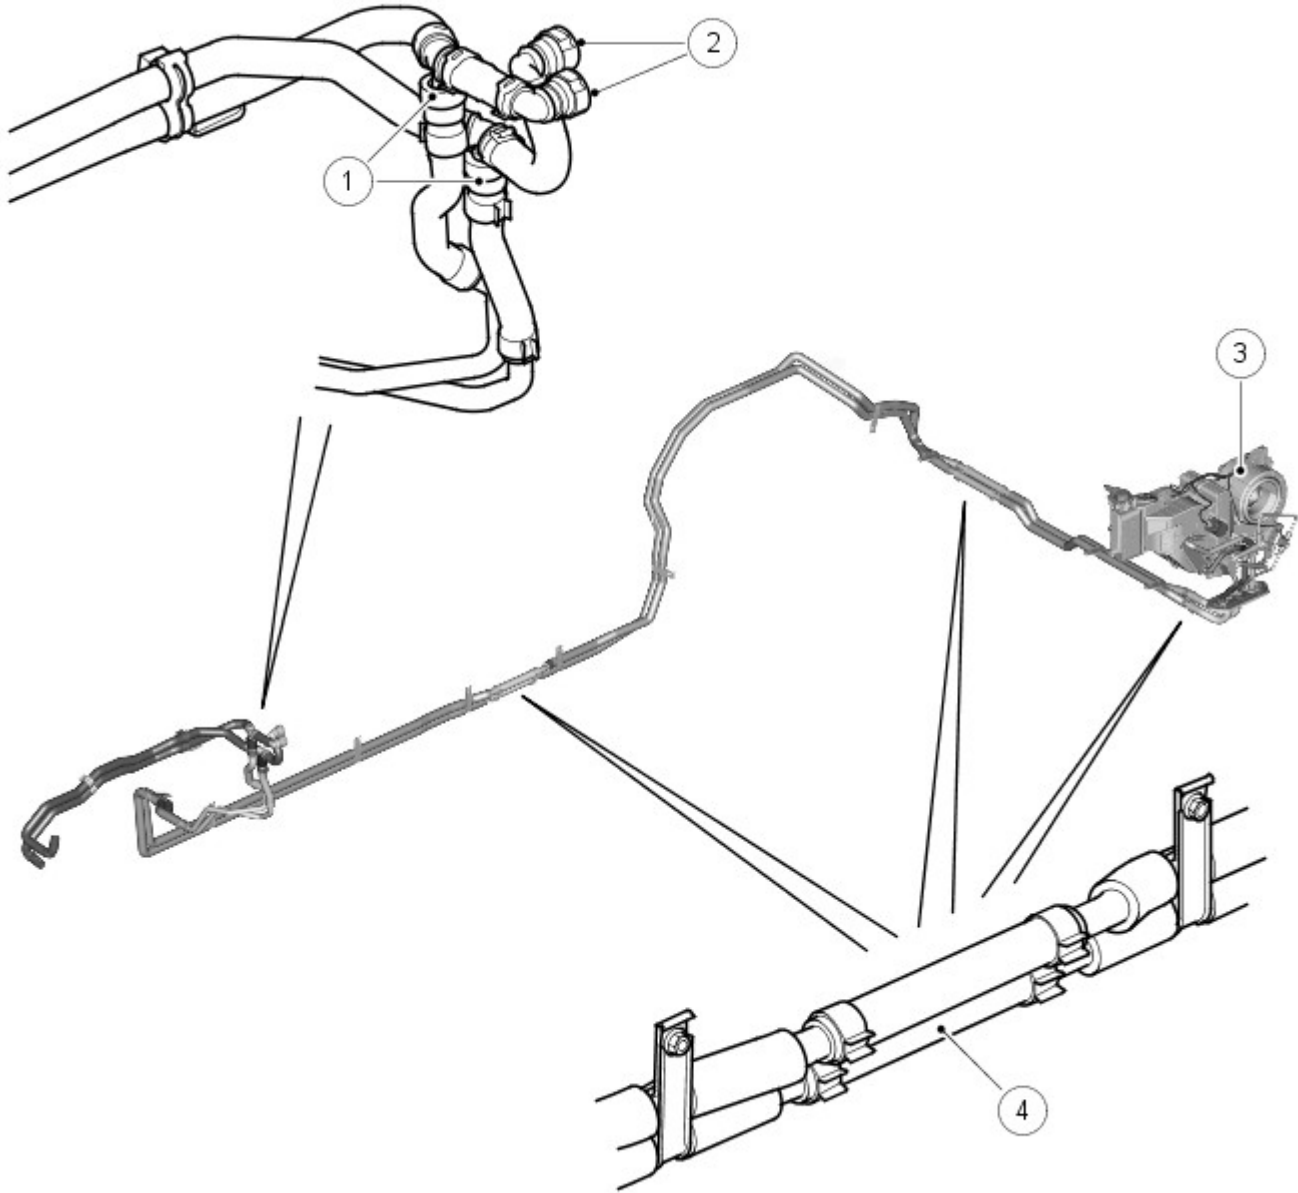

E47879

Item	Part Number	Description
1	-	Quick release connections to engine cooling system
2	-	Quick release connections to main heater
3	-	Auxiliary climate control assembly
4	-	In-line connections

## DISTRIBUTION SYSTEM