

# Electronic Engine Controls - V8 5.0L Petrol - Engine Oil Level Sensor

Removal and Installation


## Removal

- NOTE: Removal steps in this procedure may contain installation details.


1.  **WARNING:** Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Engine Oil Draining and Filling](#) (303-01D Engine - V8 5.0L Petrol, General Procedures).

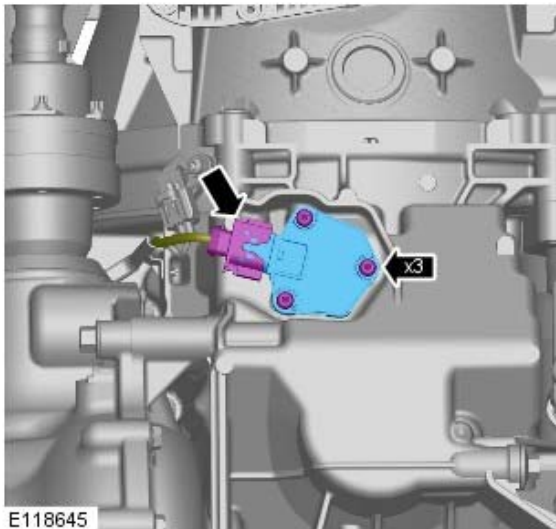

3. **3. CAUTIONS:**

 Before the disconnection or removal of any components, make sure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.

 Remove and discard the O-ring seal.

- NOTE: Some variation in the illustrations may occur, but the essential information is always correct.

*Torque:* 12 Nm

## Installation

1. To install, reverse the removal procedure.