



REAR JUNCTION BOX

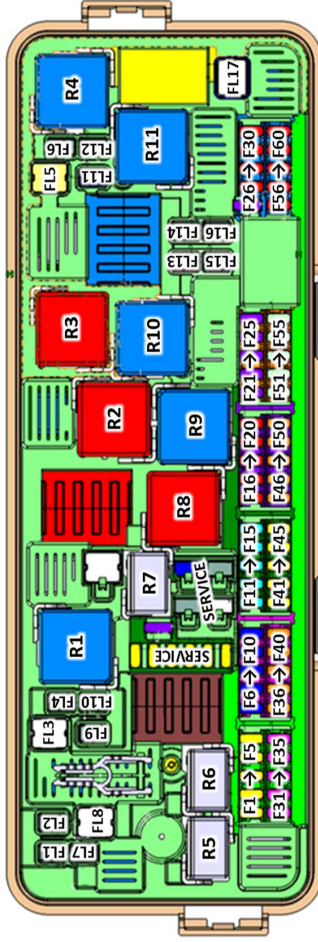

Fuses: See parts catalogue for the replacement.
Caution: If the fuses are replaced, the rear window may not operate. Always switch off the ignition and the affected electrical unit, before replacing a fuse.

Fuse Number (Amps)	Function	Fuse Type	Box Pinout Reference
F1	Switchgear-Rear Console - Row 3rd	Microfuse	C7-5 C4BR02G-5
F2	-	-	-
F3	Heater Element-Cushion-Rear-Right	Microfuse	C7-3 C4BR02G-3
F4	Heater Element-Cushion-Rear-Left	-	-
F5	-	-	-
F6	-	-	-
F7	-	-	-
F8	-	-	-
F9	Switchgear Seat - Driver Switchgear Seat - Passenger Module-Driver Seat Heater Element-Cushion-Rear-Right Switchgear Socket-Rear-Right	Microfuse	C6-2 C4BR02F-2
F10	Heater Element-Cushion-Right Heater Element-Cushion-Left	Microfuse	C6-1 C4BR02F-1
F11	Relay Rear-Seat - Row 2nd	Microfuse	C5-5 C4BR02E-5
F12	Heater Element-Cushion-Rear-Right Heater Element-Cushion-Rear-Left	Microfuse	C5-4 C4BR02E-4
F13	Switchgear-Seat-Rear-Left Switchgear-Seat-Rear-Right	Microfuse	C5-3 C4BR02E-3
F14	Motor-Wiper-Rear window	Microfuse	C5-2 C4BR02E-2
F15	Trailer Pick-Up	Microfuse	C5-1 C4BR02E-1
F16	-	-	-
F17	Socket Accessory-12V - C-Clubby Box	Microfuse	C4-4 C4BR02D-4
F18	Socket Accessory-12V-Rear	Microfuse	C4-3 C4BR02D-3
F19	Socket Accessory-12V-Rear (Cigar Lighter)	Microfuse	C4-2 C4BR02D-2
F20	Element-Heated Rear Window	Microfuse	C4-1 C4BR02D-1
F21	-	-	-
F22	-	-	-
F23	Instrument Cluster	Microfuse	C3-3 C4BR02C-3
F24	Socket-Charging-USB-Floor Console-Rear-Left	Microfuse	C3-2 C4BR02C-2
F25	Socket-Charging-USB-Floor Console-Rear-Left	Microfuse	C3-1 C4BR02C-1
F26	Module-Electronic Tool Collection	MINIFUSE	C2-5 C4BR02B-5

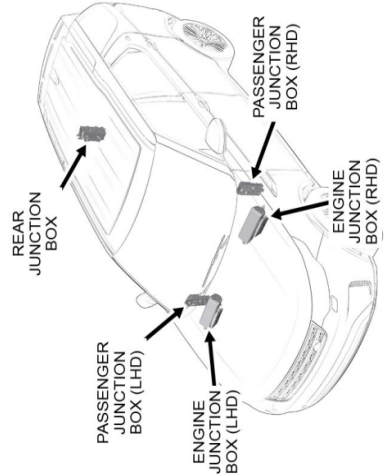

Relays: See parts catalogue for the replacement.
Note: It is recommended that relays should only be replaced by qualified persons.

Fuse Number (Amps)	Function	Fuse Type	Box Pinout Reference
F27	Module-Blind Spot Monitoring-Right Module-Blind Spot Monitoring-Left Module-Control-Image Processing Module-Parking Aid Control Module-Camera Control Camera-Rear view	Microfuse	C2-4 C4BR02B-4
F28	Module-Control-Head-Up Display Module-Control-Phone-Use-Display Fan-Cooling-Head-Up Display	Microfuse	C2-3 C4BR02B-3
F29	Speed Control Module	Microfuse	C2-2 C4BR02B-2
F30	Module-Diesel Exhaust Fluid (DEF) Tank	Microfuse	C2-1 C4BR02B-1
F31	-	-	-
F32	-	-	-
F33	-	-	-
F34	-	-	-
F35	-	-	-
F36	Module-Rear Differential Control	Microfuse	C6-10 C4BR02M-1
F37	Module-Driver Seat	Microfuse	C6-9 C4BR02F-9
F38	-	-	-
F39	-	-	-
F40	-	-	-
F41	-	-	-
F42	-	-	-
F43	-	-	-
F44	-	-	-
F45	Module-Powertrain Control Unit-Fuel Tank	Microfuse	C5-6 C4BR02E-6
F46	Module - Fuel Pump - Driver	Microfuse	C4-10 C4BR02D-10
F47	-	-	-
F48	Keyless Vehicle Module	Microfuse	C4-8 C4BR02D-8
F49	Module-Hands-Free Tailgate-Left Module-Hands-Free Tailgate-Right	Microfuse	C4-7 C4BR02D-7
F50	Controller Slave Infotainment	Microfuse	C4-6 C4BR02D-6

Fuse Number (Amps)	Function	Fuse Type	Box Pinout Reference
F51	Controler Master Infotainment Audio Head Unit	Microfuse	C3-10 C4BR02C-10
F52	Panel-Audio VoloInput-Output Assembly - BCM-GWM	Microfuse	C3-9 C4BR02C-9
F53	Panel-Portable Device Interface-Rear	Microfuse	C3-8 C4BR02C-8
F54	Trailer Pick-Up	Microfuse	C3-7 C4BR02C-7
F55	Module-Integrated Suspension Control	Microfuse	C3-6 C4BR02C-6
F56	-	-	-
F57	Keyless Vehicle Module	Microfuse	C2-9 C4BR02B-9
F58	Module-Passenger Seat Switchgear-Seat-Passenger	Microfuse	C2-8 C4BR02B-8
F59	Module-Integrated Suspension Control	Microfuse	C2-7 C4BR02B-7
F60	Diesel Exhaust Fluid Engine Junction Box	Microfuse	C2-6 C4BR02B-6
F61	Module-Control-Deployable Towbar	Pease	C12-3 C4BR02M-3
F62	Module Tailgate Control Upper	Pease	C12-4 C4BR02M-4
F63	-	-	-
F64	-	-	-
F65	Module-Blower-Control	Jease	C15-3 C4BR02R-3
F66	-	-	-
F67	Module - Rear Differential Control	Pease	C12-1 C4BR02M-1
F68	Module Tailgate Control - Lower	Jease	C12-2 C4BR02M-2
F69	-	-	-
F70	Module - Anti-lock Brake System (ABS) - Control	Pease	C13-2 C4BR02N-2
F71	-	-	-
F72	-	-	-
F73	Module - Diesel Exhaust Fluid (DEF) - Heating Control	Pease	C9-2 C4BR02J-2
F74	-	-	-
F75	Relay Air Suspension	Jease	C4-6 C4BR02D-6

Relay Number	Type	Function	Relay Type	Box Pinout
R1	Relay	Cigar Lighter	Power Mini	C14-2
R2	Relay	Blower Rear	Mini	C14-4
R3	Relay	Air Suspension Cut off	Power Mini	C10-1 C11-3 C11-3
R4	Relay	Rear Seat - 3rd Row	Micro RV	C8-1
R5	Relay	Rear Wiper	Micro RV	C14-8
R6	Relay	Fuel Pump	Mini	C14-7
R7	Relay	Heated Rear Screen	Mini	C14-3
R8	Relay	Accessory Socket	Mini	C11-5
R9	Relay	Air Suspension	Power Mini	C11-1 C11-7
R10	Relay	Comfort 2	PCB	C8-9
R11	Relay	Engine Run	PCB	C14-10
R12	Relay	-	-	-
R13	Relay	-	-	-
R14	Relay	-	-	-
R15	Relay	-	-	-
R16	Relay	-	-	-
R17	Relay	Control - Diesel Exhaust Fluid (DEF) Tank-Module	PCB	C11-6
R18	Relay	Comfort 1	PCB	C8-9
R19	Relay	-	-	-
R20	Relay	-	-	-
R21	Relay	Voltage Quality Module / Extended Ignition	PCB	C11-9
R22	Relay	-	-	-