


PUBLISHED: 11-MAY-2017
2017.0 DISCOVERY (LR), 417-01

EXTERIOR LIGHTING


REAR QUARTER PANEL LAMP ASSEMBLY (G2159211)

REMOVAL AND INSTALLATION

REMOVAL

 **CAUTION:**


Protect the surrounding paintwork to avoid damage.

 **NOTE:**


Removal steps in this procedure may contain installation details.

1. Remove the loadspace trim panel.
Refer to: Left Loadspace Trim Panel (501-05, Removal and Installation).
Refer to: Right Loadspace Trim Panel (501-05, Removal and Installation).

2.

 NOTE:

If equipped.

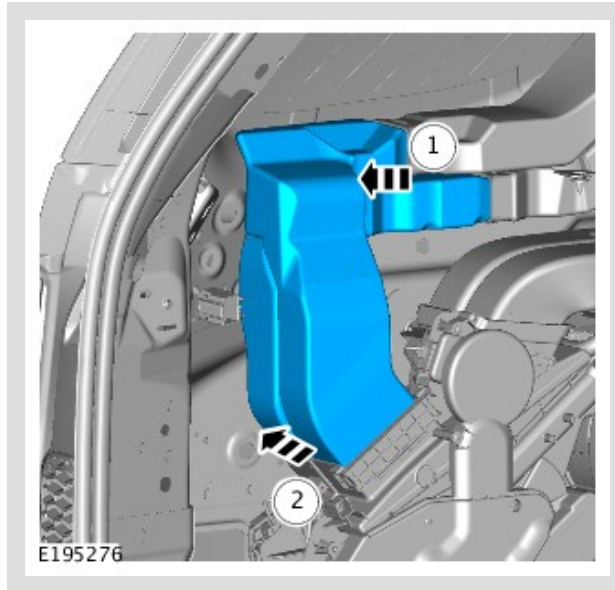


Remove the air duct.

3.

⚠ CAUTION:

Take extra care not to damage the component.

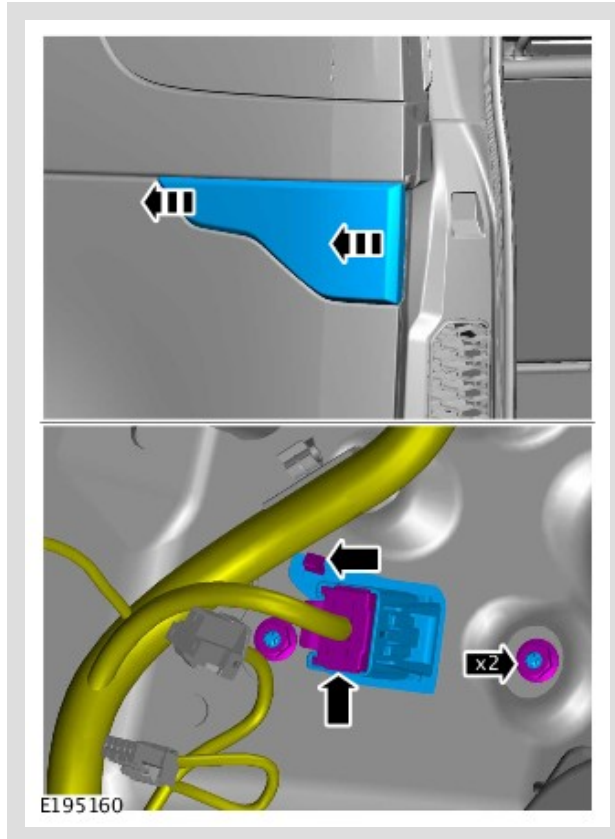

Remove the rear lamp assembly.

Torque: 2.5 Nm

INSTALLATION

1. To install, reverse the removal procedure.