PUBLISHED: 11-MAY-2017 2017.0 DISCOVERY (LR), 417-01

EXTERIOR LIGHTING

LIFTGATE LAMP ASSEMBLY (G2159212)

REMOVAL AND INSTALLATION

REMOVAL



Protect the surrounding paintwork to avoid damage.

△ NOTE:

Removal steps in this procedure may contain installation details.


Remove the tailgate trim panel.

Refer to: Tailgate Trim Panel (501-05, Removal and Installation).

2

! CAUTION:

Take extra care not to damage the component.

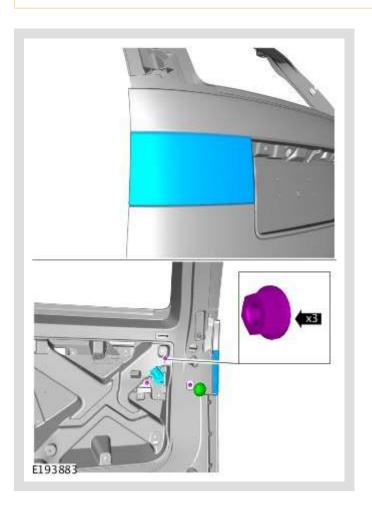

Remove the rear lamp assembly.

Torque: 2.5 Nm

INSTALLATION

1. To install, reverse the removal procedure.