PUBLISHED: 21-NOV-2016 2017.0 DISCOVERY (LR), 303-07

ENGINE IGNITION - V6 S/C 3.0L PETROL

SPARK PLUGS (G1947767)

REMOVAL AND INSTALLATION

REMOVAL



WARNING:

Be prepared to collect escaping fuel.

! CAUTION:

- Be prepared to collect escaping coolant.
- Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

△ NOTE:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.


Before working on the fuel system make sure to study the fuel system health and safety section of this manual.


Refer to: Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions (100-00, Description and Operation).

- Disconnect the battery ground cable. Refer to: Specifications (414-00, Specifications).
- Remove the engine cover. Refer to: Engine Cover - V6 S/C 3.0L Petrol (501-05, Removal and Installation).

△ NOTE:

Left side.

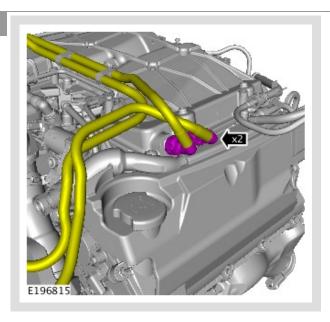


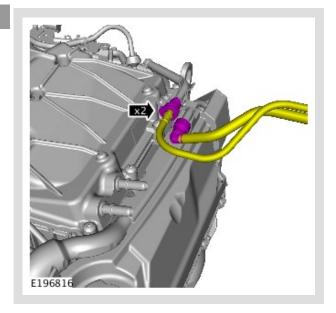



6.


: CAUTION:

To prevent contamination, make sure to install the oil filler cap after removing the sound proofing pad.

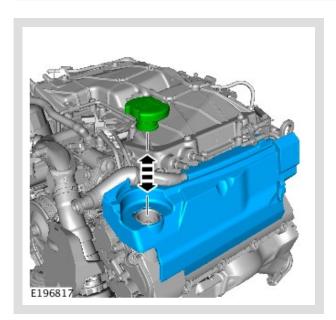

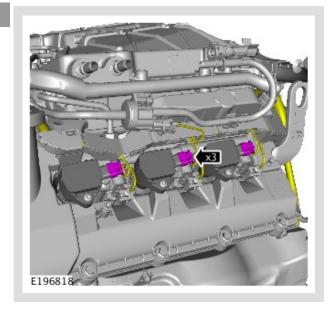


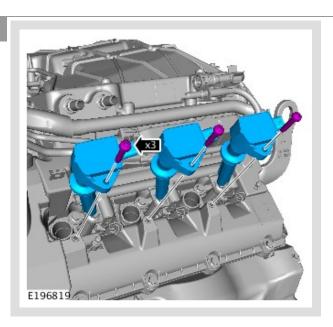


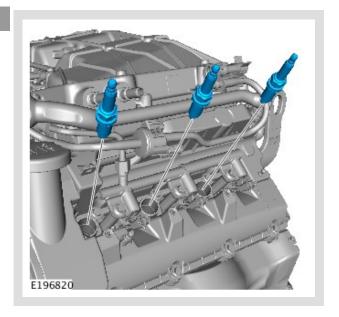



△ NOTE:


Right side.

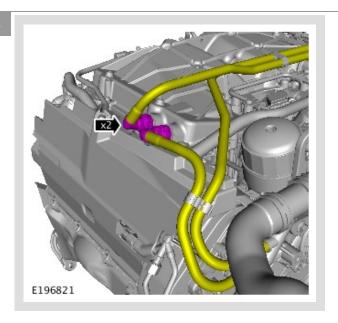

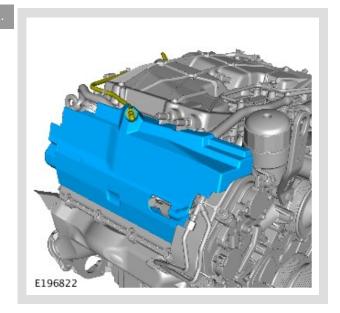

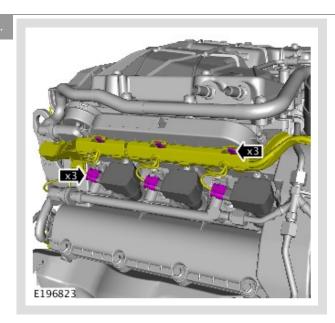

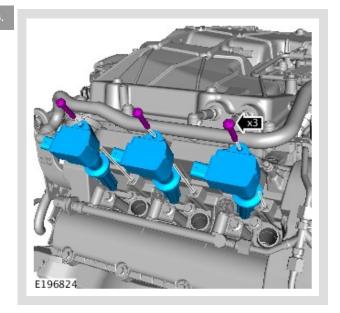

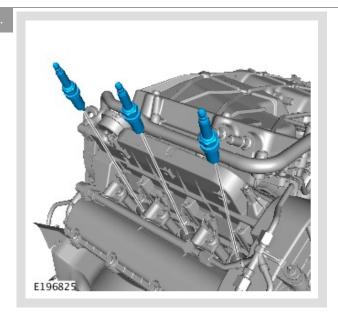


INSTALLATION




△ NOTE:

Right side.

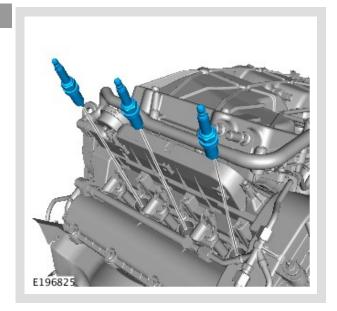



Torque: 20 Nm


2.

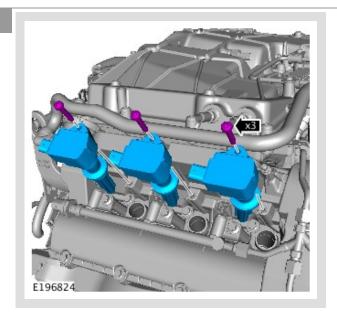

Torque: 7 Nm

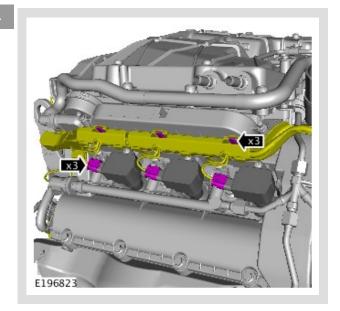


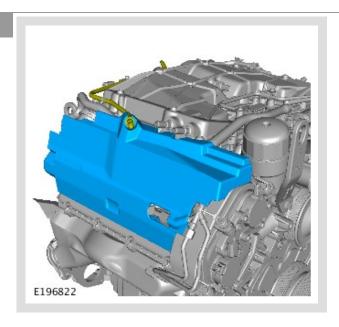

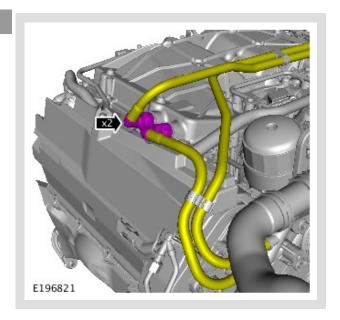


△ NOTE:


Left side.

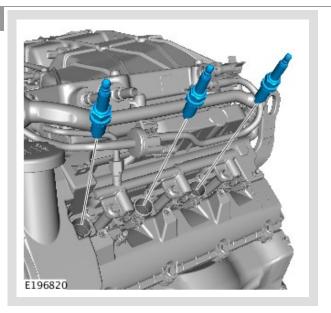



Torque: 20 Nm

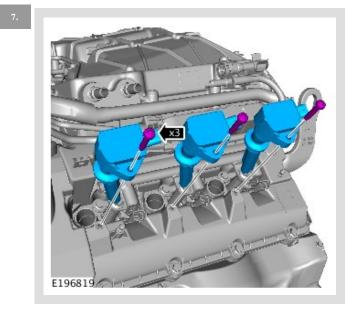


Torque: 7 Nm

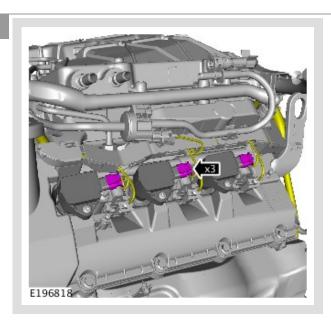

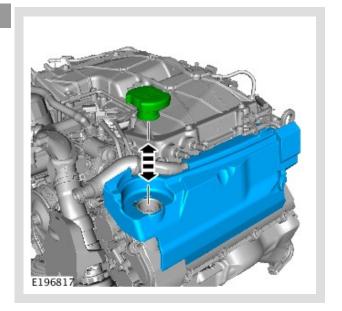

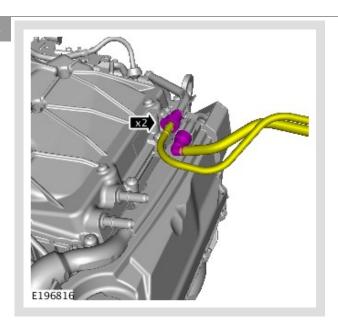

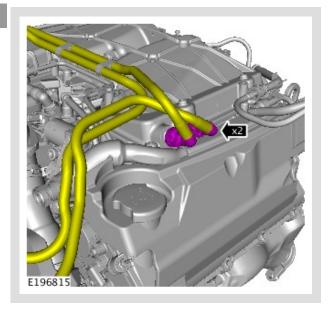

Install the engine cover.

Refer to: Engine Cover - V6 S/C 3.0L Petrol (501-05, Removal and Installation).

Connect the battery ground cable.

Refer to: Specifications (414-00, Specifications).