

PUBLISHED: 21-NOV-2016
2017.0 DISCOVERY (LR), 501-20

SEATBELT SYSTEM

REAR SAFETY BELT BUCKLE (G2010449)

REMOVAL AND INSTALLATION

76.73.32	STALK - REAR SAFETY BELT - LH /EACH - RENEW	ALL DERIVATIVES	0.1	USED WITHINS
----------	--	--------------------	-----	-----------------

REMOVAL

WARNING:

To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplementary restraints system (SRS) components. To deplete the backup power supply energy disconnect the battery ground cable and wait for 10 minutes. Failure to follow this instruction may result in personal injury.


NOTE:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.


All vehicles

1. Before handling any components within the Supplementary Restraint System (SRS), make sure that the safety guidelines are followed.
Refer to: Standard Workshop Practices (100-00, Description and Operation).

2. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).

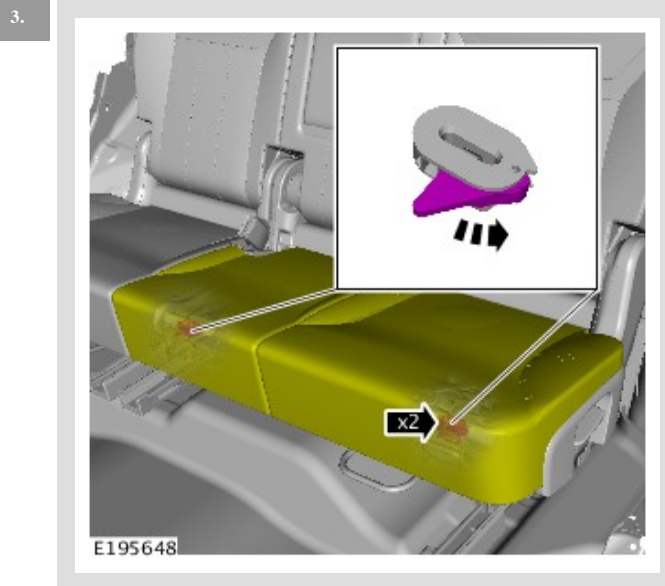


Vehicles with heated rear seat

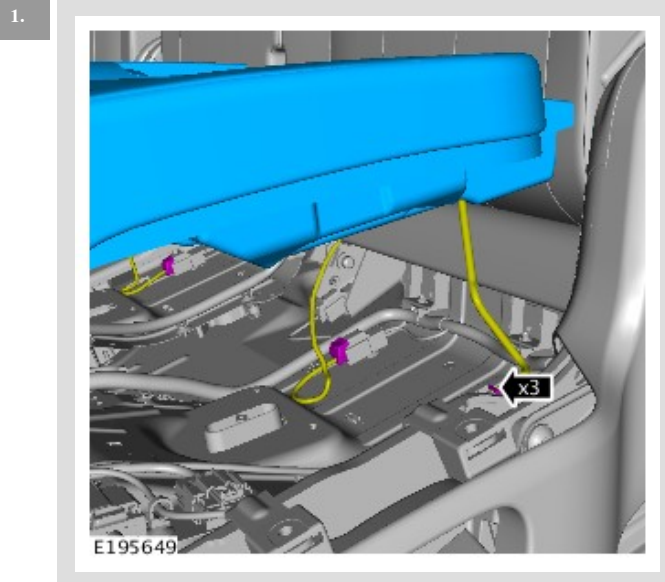


Vehicles without heated rear seat

1.

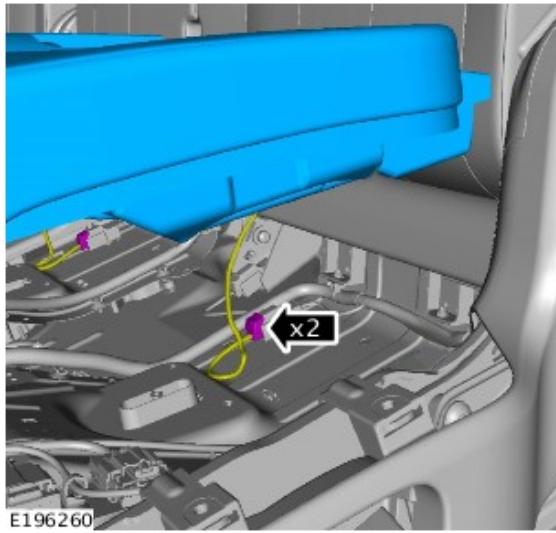

All vehicles


1.

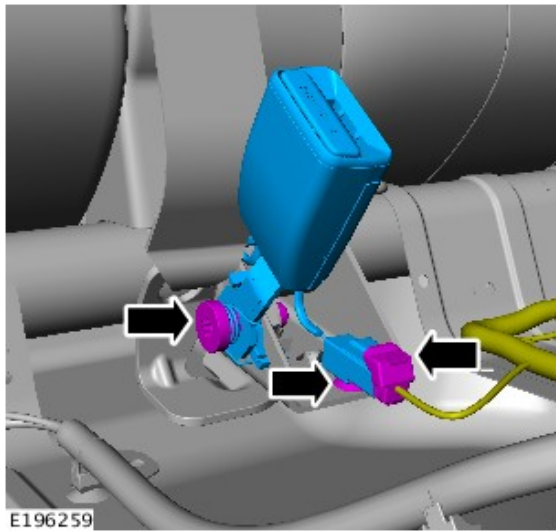

INSTALLATION

All vehicles


1.

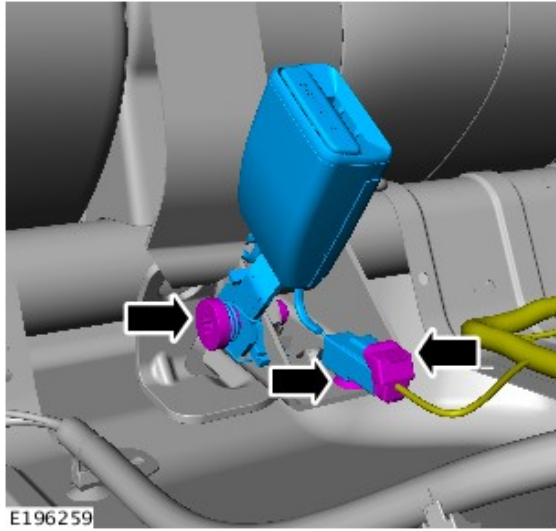

Torque: 40 Nm


Vehicles with heated rear seat

1.

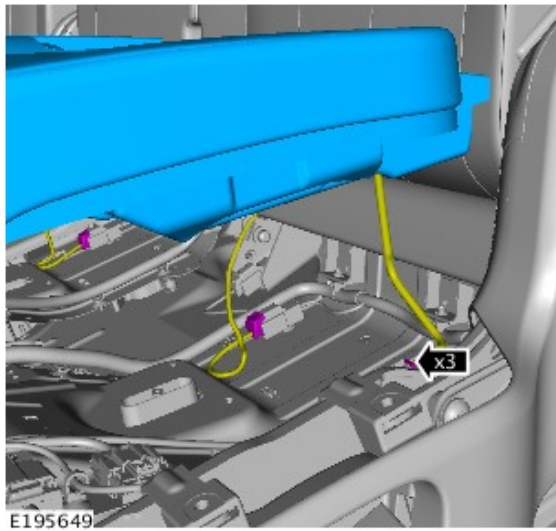


Vehicles without heated rear seat

1.

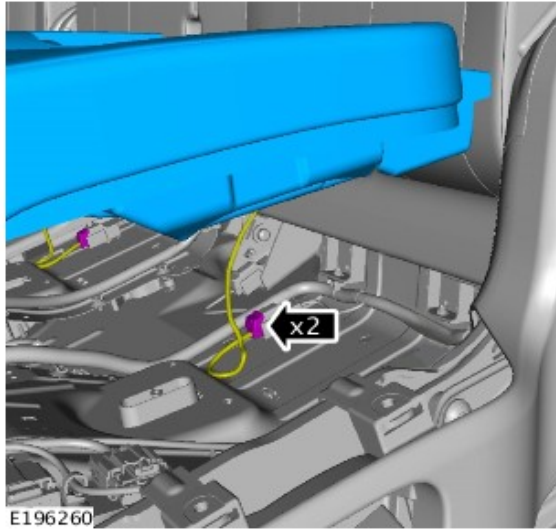

All vehicles

1.

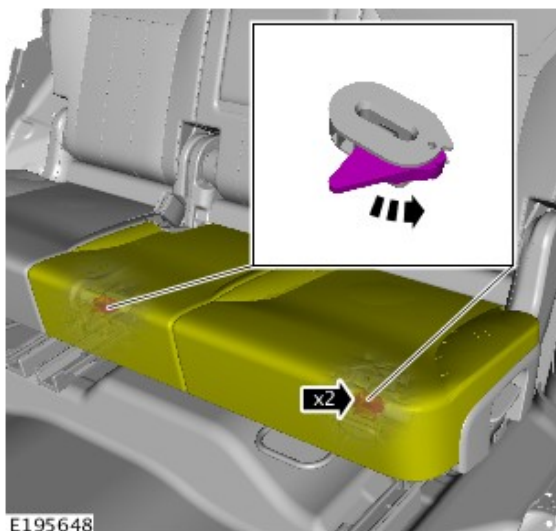

2. Connect the battery ground cable.
Refer to: Specifications (414-00, Specifications).

PUBLISHED: 21-NOV-2016
2017.0 DISCOVERY (LR), 501-20

SEATBELT SYSTEM

REAR SAFETY BELT RETRACTOR (G2009604)

REMOVAL AND INSTALLATION

76.73.33	REEL - REAR SAFETY BELT - EACH - RENEW	ALL DERIVATIVES	0.4	USED WITHINS	
----------	---	--------------------	-----	-----------------	--

REMOVAL



WARNING:

To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplementary restraints system (SRS) components. To deplete the backup power supply energy disconnect the battery ground cable and wait for 10 minutes. Failure to follow this instruction may result in personal injury.



NOTE:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1. Before handling any components within the Supplementary Restraint System (SRS), make sure that the safety guidelines are followed.
Refer to: Standard Workshop Practices (100-00, Description and Operation).


2. Remove the C-pillar upper trim panel.
Refer to: C-Pillar Upper Trim Panel (501-05, Removal and Installation).

3. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).

4.

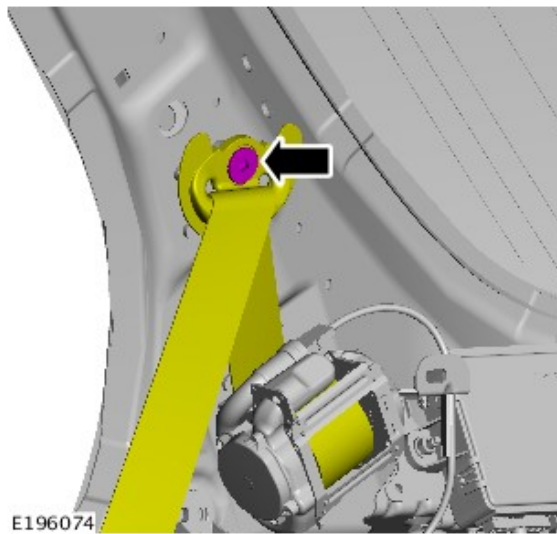

5.

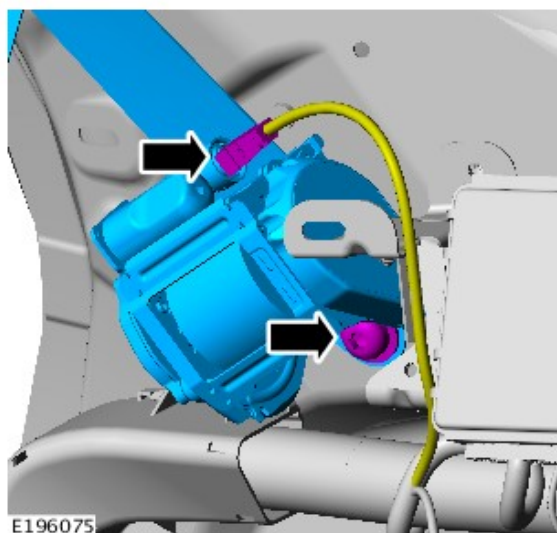


INSTALLATION

1.


⚠ CAUTION:

Make sure that the component is correctly located.

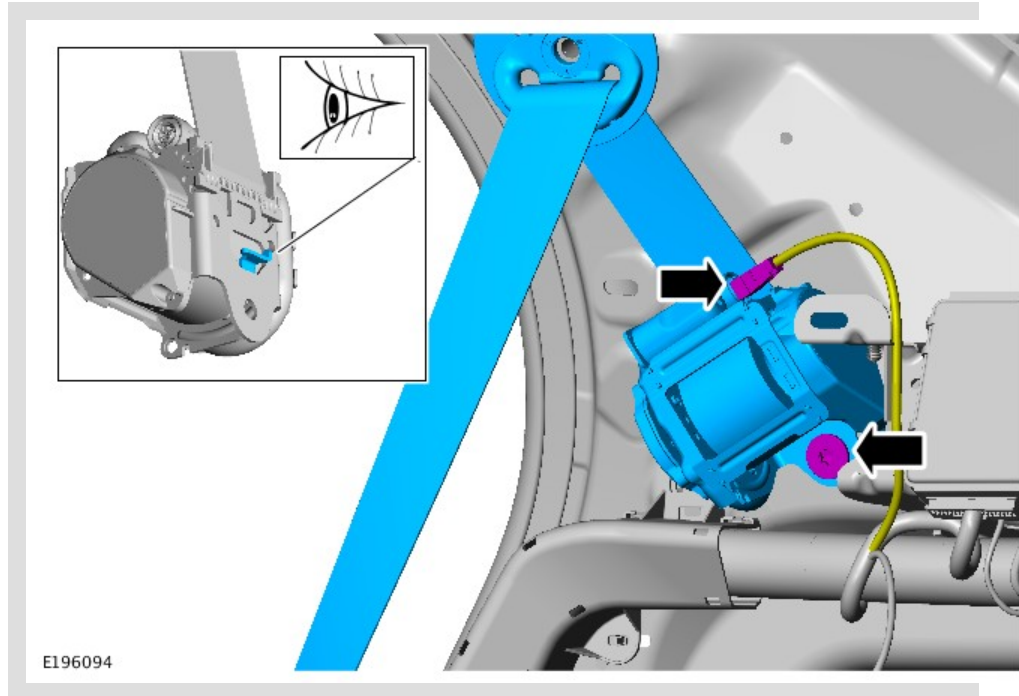

Torque: 40 Nm

2.

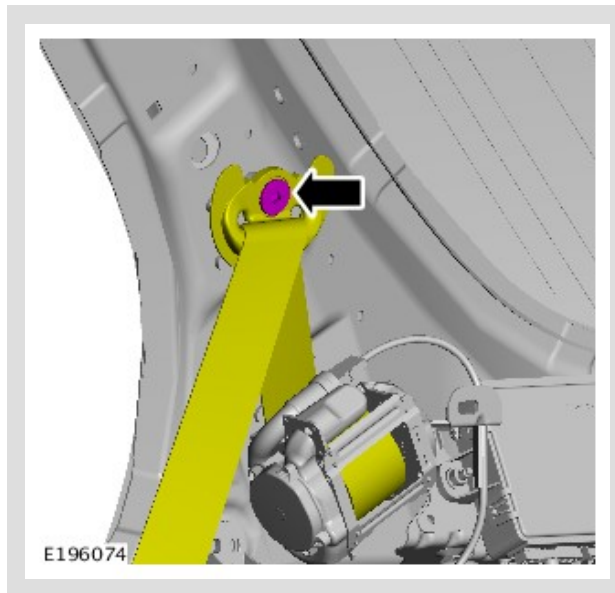

Torque: 40 Nm

3. Connect the battery ground cable.
Refer to: Specifications (414-00, Specifications).

4. Install the C-pillar upper trim panel.
Refer to: C-Pillar Upper Trim Panel (501-05, Removal and Installation).