


PUBLISHED: 18-APR-2017
2017.0 DISCOVERY (LR), 501-11

GLASS, FRAMES AND MECHANISMS


REAR DOOR WINDOW (G1987283)

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)

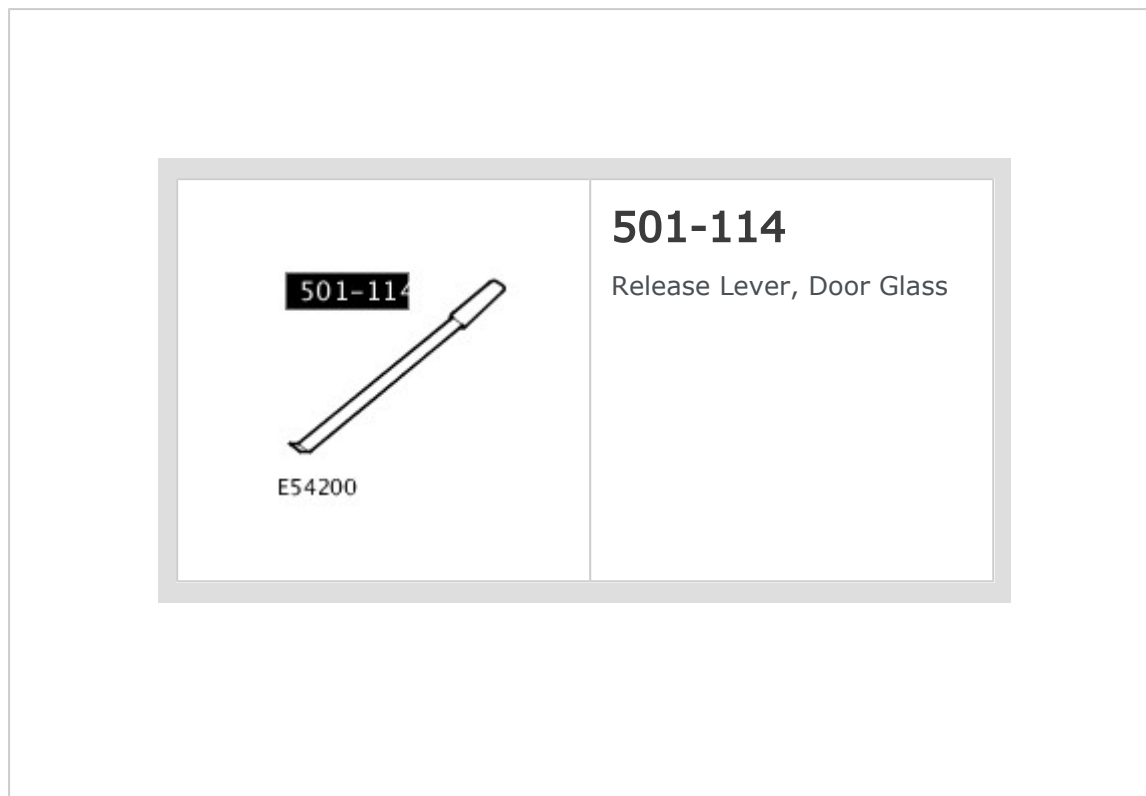

REMOVAL

 **NOTE:**


Removal steps in this procedure may contain installation details.

1. Remove the rear door trim panel.
Refer to: Rear Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.


⚠ CAUTION:

Care must be taken not to damage the component.

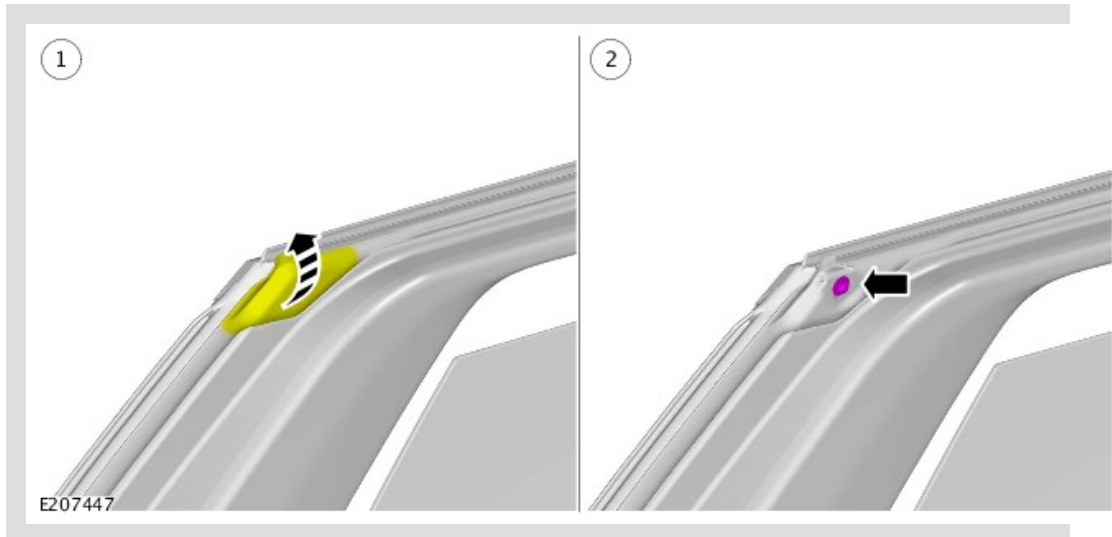

- Reposition the door weatherstrip.
- Remove the screw.
Torque: 2 Nm

3.

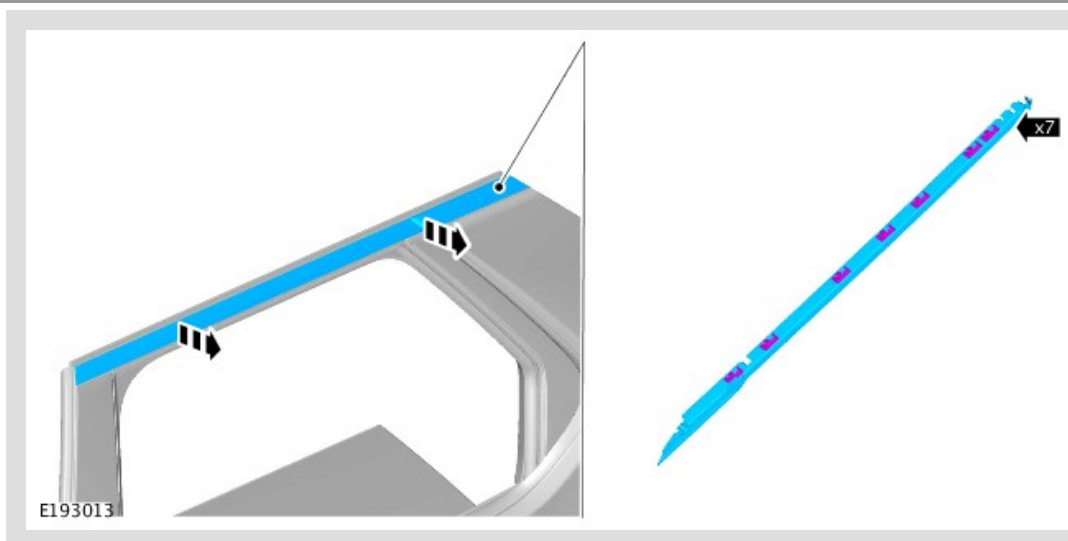


Remove the rear door upper finisher.

4.


⚠ CAUTION:

Take extra care not to damage the component.

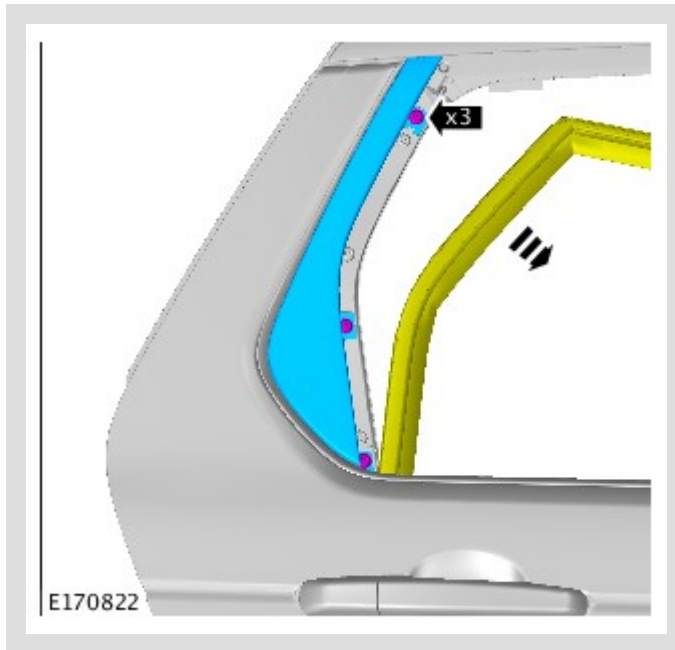


- Release the weatherstrip for access.
- Remove the screws.
Torque: 2 Nm
- Remove the trim panel.

5.

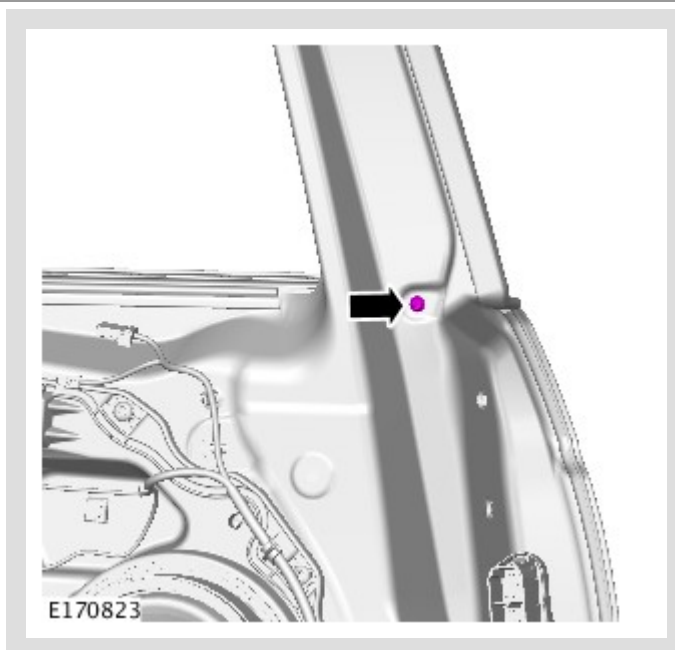


- Remove the screw.
Torque: 2 Nm

6.

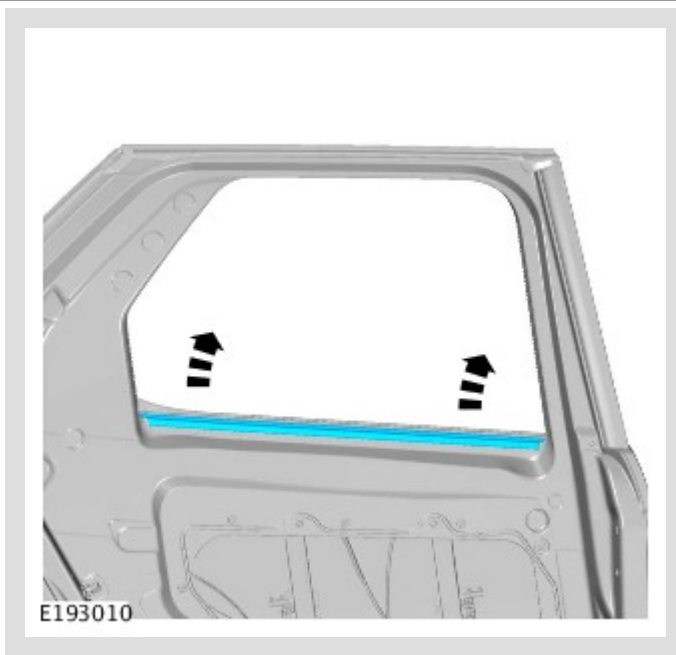

Carefully remove the inner waist seal.

7.

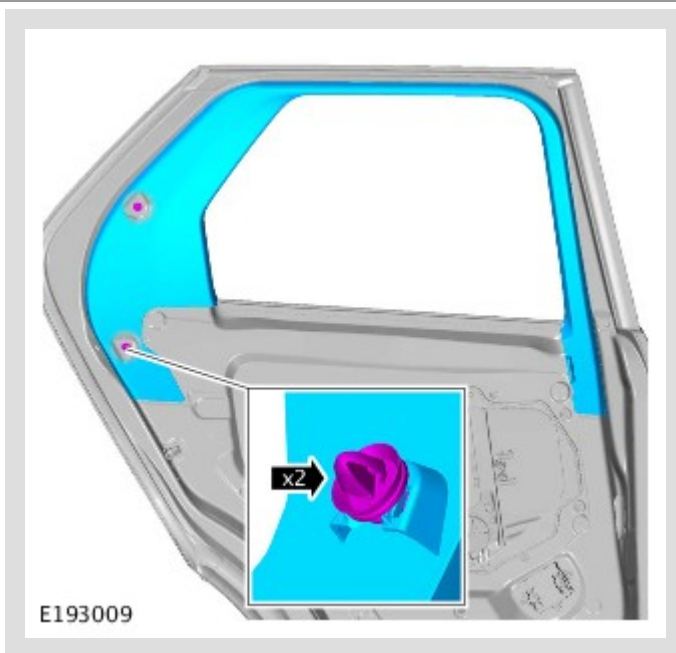


Remove door inner frame finisher.

8.


⚠ CAUTION:

Care must be taken not to damage the component.

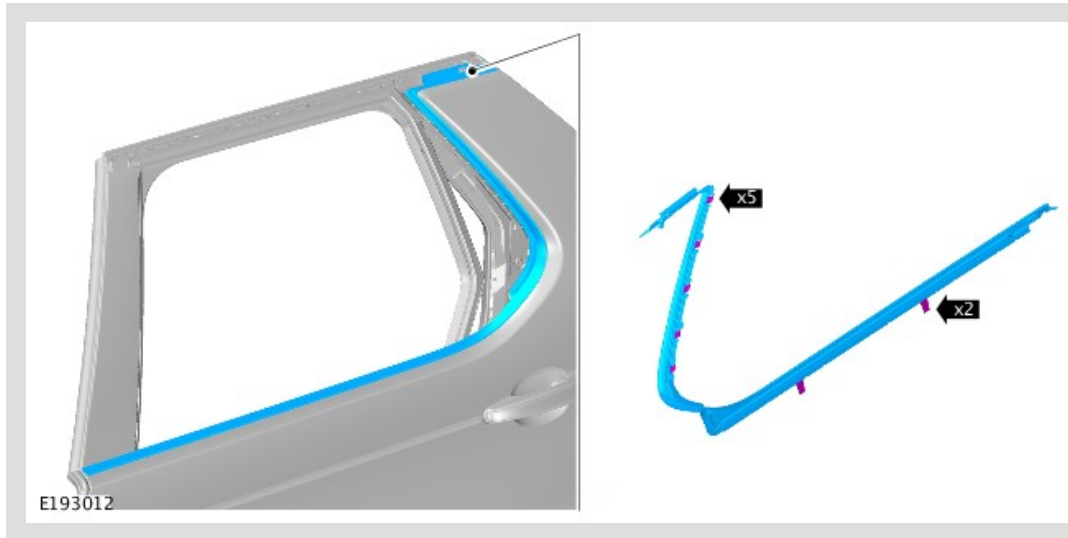


Remove the door weatherstrip.

9.

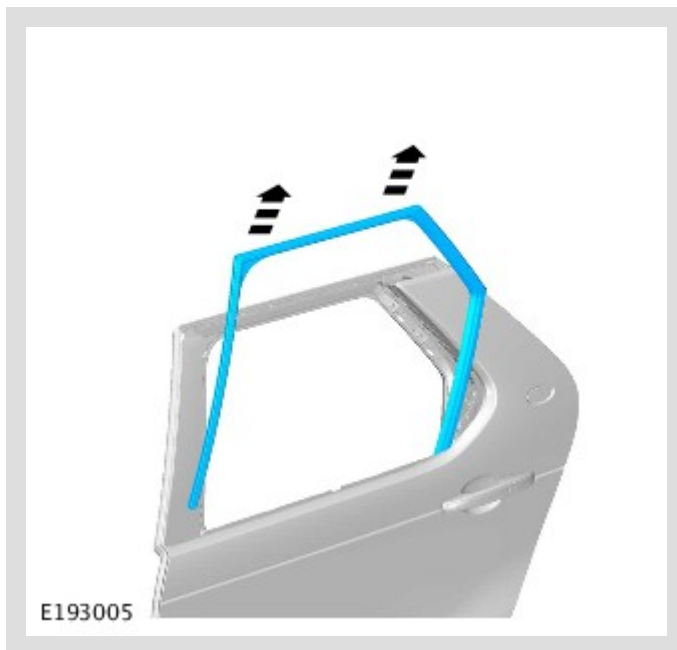

Remove the door weatherstrip.

10.

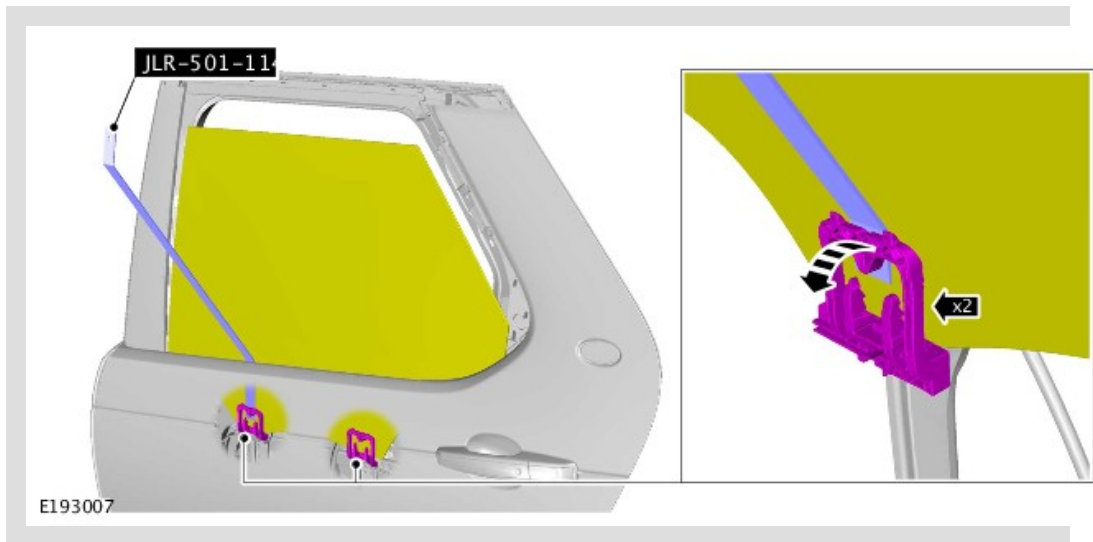


- Release then remove the rear door window.
Special Tool(s): [501-114](#)

INSTALLATION

1.

⚠ CAUTION:

Two audible clicks are heard when the clips are fully located.

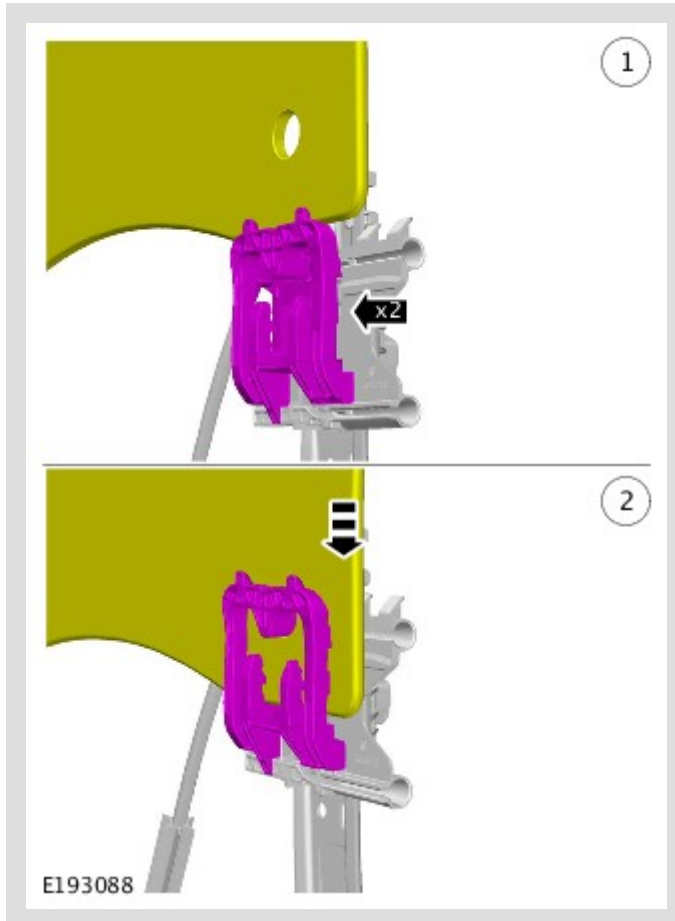

To install, reverse the removal procedure.