

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

SERVICE	Miles x 1000					Kilometers x 1000				
	15	30	45	60	75	90	105	120	135	150
Change engine oil and replace filter	●	●	●	●	●	●	●	●	●	●
VEHICLE INTERIOR										
Reset the Service Interval Indicator	●	●	●	●	●	●	●	●	●	●
Reset engine oil level indicator	●	●	●	●	●	●	●	●	●	●
Check operation of all lights, warning indicators and horn	●	●	●	●	●	●	●	●	●	●
Check operation of front/rear wiper washer systems	●	●	●	●	●	●	●	●	●	●
Check condition and security of seats and seat belts	●	●	●	●	●	●	●	●	●	●
Replace pollen filter	●	●	●	●	●	●	●	●	●	●
VEHICLE EXTERIOR										
Check condition of wiper blades	●	●	●	●	●	●	●	●	●	●
Check operation of all door checks, hood latch, and fuel flap; lubricate door checks	●	●	●	●	●	●	●	●	●	●
ENGINE COMPARTMENT										
Check / top up fluid levels (brake, coolant, power steering, windshield washer)	●	●	●	●	●	●	●	●	●	●
Check specific gravity of coolant	●	●	●	●	●	●	●	●	●	●
Check condition of accessory drive belt(s)	●	●	●	●	●	●	●	●	●	●
Change brake fluid: every 3 years			●							
Change engine coolant: every 10 years	●									
Replace spark plugs							●			
Replace air cleaner elements	●							●		
Replace accessory drive belt	●									

Maintenance Interval – whichever occurs first (based on expected vehicle display).

Maintenance Interval – whichever occurs first (based on expected vehicle display).													
SERVICE	Miles x 1000					Kilometers x 1000							
	15	30	45	60	75	90	105	120	144	168	192	216	240
Years	1	2	3	4	5	6	7	8	9	10			
VEHICLE UNDERBODY													
NOTE: Remove all road wheels before inspecting brake components.													
Inspect brake pads for wear, calipers for leaks, and discs for condition	•	•	•	•	•	•	•	•	•	•	•	•	•
Check adjustment of electronic parking brake	•	•	•	•	•	•	•	•	•	•	•	•	•
Inspect tire pressures, condition, and tread depth	•	•	•	•	•	•	•	•	•	•	•	•	•
Inspect exhaust system	•	•	•	•	•	•	•	•	•	•	•	•	•
Inspect for fluid leaks	•	•	•	•	•	•	•	•	•	•	•	•	•
Inspect condition of driveshafts, suspension, and steering boots/gaiters	•	•	•	•	•	•	•	•	•	•	•	•	•
Inspect fuel, hydraulic and fluid pipes, hoses and unions	•	•	•	•	•	•	•	•	•	•	•	•	•
Inspect electrical harnesses, routing and connections	•	•	•	•	•	•	•	•	•	•	•	•	•
Lubricate wheel spigot bore with anti-seize compound; install road wheels to opposite side of same axle (except unidirectional tires, which install on same side)	•	•	•	•	•	•	•	•	•	•	•	•	•
Replace all flexible brake hoses: every 6 years						•							
Change transmission fluid and filter: every 10 years	•												
Change rear locking differential oil	•					•							
Change front and rear axle oil (non-locking differential): every 10 years	•												
Change transfer box oil; replace drain and fill plugs and washers	•					•							
Conduct road test; select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears	•	•	•	•	•	•	•	•	•	•	•	•	•
If fault lamps are illuminated, interrogate with IDS/SDD and report findings	•	•	•	•	•	•	•	•	•	•	•	•	•
Check for any outstanding Recalls or Service Actions	•	•	•	•	•	•	•	•	•	•	•	•	•
Endorse Service Record	•	•	•	•	•	•	•	•	•	•	•	•	•