



Fig. N1-4. Circuit diagram, 'Regular' and 'Long', Diesel models. Series IIA, with combined electrical services, starter and heater plug switch, positive earth

Circuit diagram, 'Regular' and 'Long' Diesel models, Series IIA, with combined electrical services, starter and heater plug switch, positive earth

- | | |
|--|--|
| 1 Batteries, two, 6 volt positive earth | 22 Switch, headlamp dip |
| 2 Inspection socket | 23 Dynamo |
| 3 Horn push button | 24 Warning light, fuel level |
| 4 Heater plugs | 25 Fuel gauge |
| 5 Panel illumination | 26 Switch, stop light |
| 6 Panel illumination | 27 Warning light, headlamp main beam |
| 7 Tail and number plate illumination lamp | 28 Warning light, charging |
| 8 Tail and number plate illumination lamp | 29 Gauge unit, fuel tank |
| 9 Side lamp | 30 Windscreen wiper motor |
| 10 Side lamp | 31 Warning light, oil pressure |
| 11 Starter motor | 32 Switch, oil pressure warning light |
| 12 Horn | 33 Stop lamp |
| 13 Warning light, heater plug | 34 Stop lamp |
| 14 Resistance for heater plug | 35 Headlamp, main beam |
| 15 Electrical services, starter and heater plug switch | 36 Headlamp, main beam |
| 16 Switch, panel light | 37 Headlamp, dip beam |
| 17 Ammeter | 38 Headlamp, dip beam |
| 18 Lighting switch | 39 Snap connectors |
| 19 Current-voltage regulator | 40 Earth connections via terminals or fixing bolts |
| 20 Fuse box | 41 Earth connections via cables |
| 21 To interior lights | |

Key to cable colours

B—Black G—Green S—Slate N—Brown P—Purple O—Orange R—Red U—Blue L—Light W—White Y—Yellow
RN—Red with Brown, and so on

When cables have two-colour code letters, the first denotes the main and the latter the tracer colour.