
1. Turn the green and or orange bulb(s) about 45 deg the pop them out.

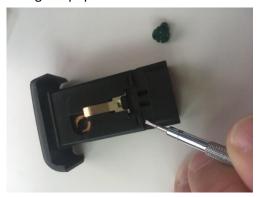




2. Now is a good time to replace the bulb. Be very careful pulling the green or orange condom off. They will rip.



3. Find the four tabs that hold the two halves of the case together and pry them open. I use an assortment of collar stays, library cards, credit cards, etc.



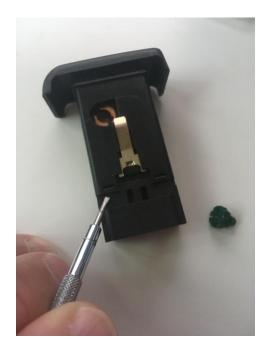

4. Pull the two halves apart SLOWLY. There will be some bits and pieces that you would much rather know where they belong.



5. Clean all the copper areas. This switch was clean. Very often the copper will have turned green with oxidation.





6. Lightly grease and reassemble being careful to put the springs over the white pylons and into the holes in the other half.