




Congratulations, your vehicle will be auto-detected by the ASWC-1.

ASWC-1 Connections

- 1) Connect the Black wire of the ASWC-1 to chassis ground.
- 2) Connect the Red wire of the ASWC-1 to a 12-volt accessory wire, one that turns on and off with the ignition key.
- 3) Connect the White/Green wire of the ASWC-1 to pin 3 of the vehicle. Below is a picture of what the connector in the vehicle looks like:

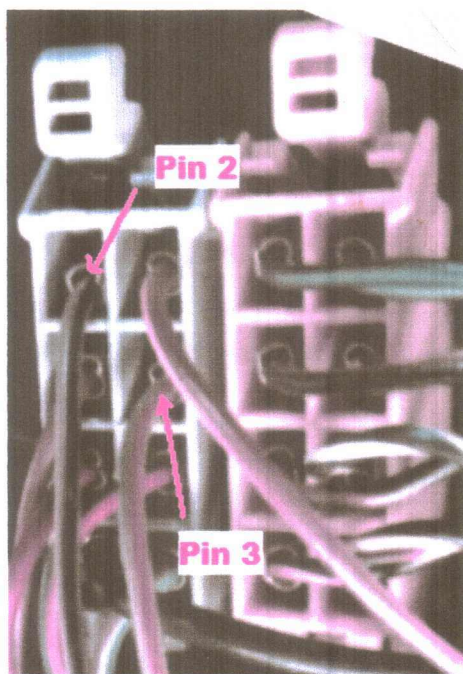

This is the wire view of the connector in the vehicle

- 4) Connect pin 2 of the vehicle harness to chassis ground. You may use the same chassis ground as the black wire.