


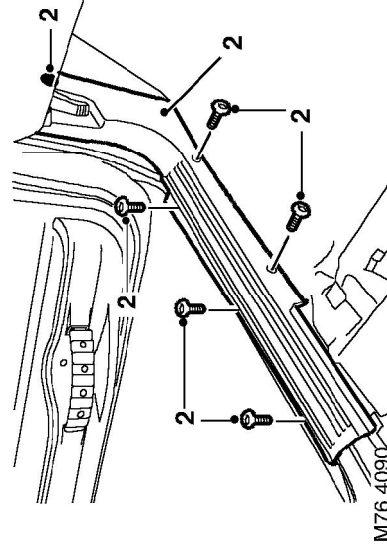
SUNROOF

Drain tube - sun/sliding roof - front - each - 5 door


 76.84.20

Remove

1. Remove headlining.
 INTERIOR TRIM COMPONENTS, REPAIRS, Headlining - 5 door.




2. Remove scrivet and 5 Torx screws securing front carpet retainer and remove carpet retainer.
3. Release drain tube from wheel arch grommet.

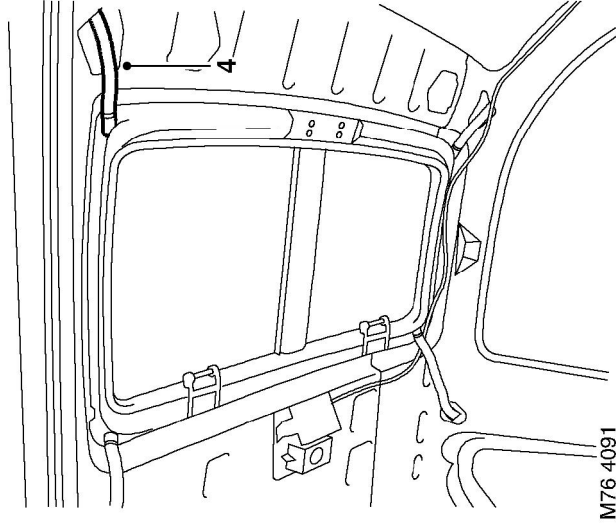

4. Disconnect drain tube from sun roof and discard cable tie.
5. Attach draw string and remove drain tube.

Refit

1. Attach draw string to drain tube and pull into position.
2. Connect drain tube to sun roof and secure with new cable tie.
3. Connect drain tube to wheel arch grommet.
4. Secure wheel arch grommet.
5. Fit carpet retainer and secure with Torx screws and scrivet.
6. Fit headlining.

 INTERIOR TRIM COMPONENTS, REPAIRS, Headlining - 5 door.




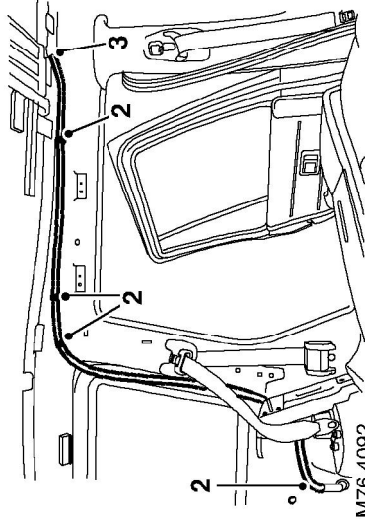
SUNROOF

Drain tube - sun/sliding roof - rear - each - 5 door

🔧 76.84.21


Remove

1. Remove headlining.
 **INTERIOR TRIM COMPONENTS, REPAIRS, Headlining - 5 door.**



2. Release drain tube from wheel arch grommet and 3 securing clips.
3. Disconnect drain tube from sun roof and discard cable tie.
4. Remove drain tube.


Refit

1. Position drain tube.
2. Connect drain tube to sun roof and secure with new cable tie.
3. Connect drain tube to wheel arch grommet and secure in clips.
4. Secure wheel arch grommet.
5. Fit headlining.
 **INTERIOR TRIM COMPONENTS, REPAIRS, Headlining - 5 door.**

Finisher - flange to headlining - front

🔧 76.84.25

Remove

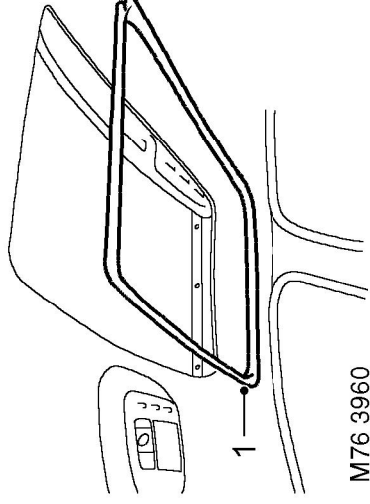

1. Release sun roof surround finisher from sun roof aperture and remove finisher.

Refit

1. Position sun roof surround finisher and secure in position, ensure locating lug is in position at the front of finisher.