



Roof Opening Panel Alignment (76.84.82)


1. With the roof opening panel closed, check the alignment of the glass to the roof panel. The glass should be central in its aperture. Profile of sunroof to body: front edge, set flush or up to 1.0 mm (0.040') low; rear edge, set flush or up to 1.0 mm (0.040') high.

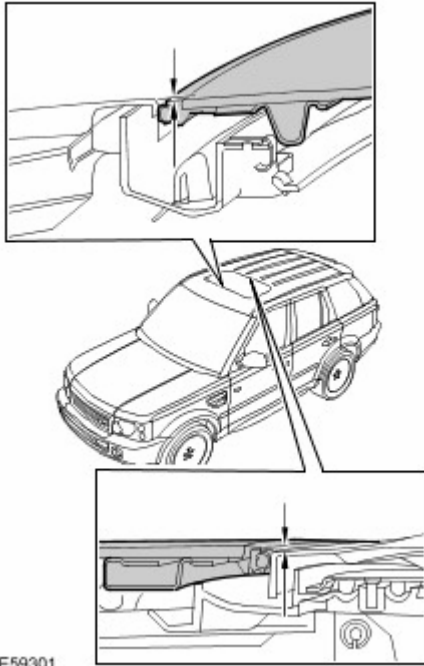

2. Open the roof opening panel blind.
3. Remove the cover.
 - Repeat the above procedure for the other side.

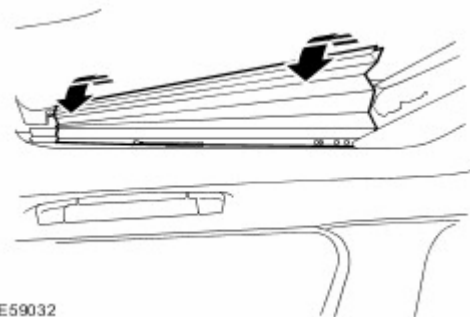

4. Loosen the 4 roof opening panel Torx screws.

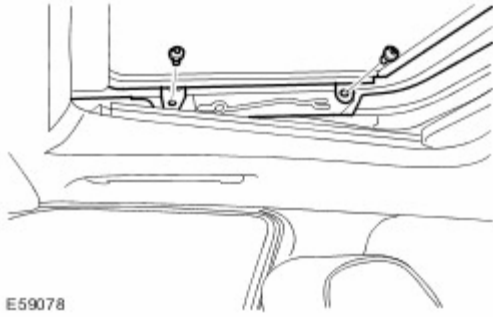

5. Align the roof opening panel.
 - Tighten the Torx screws to 6 Nm (4 lb.ft).

6. Install the cover.
 - Repeat the above procedure for the other side.

7. Close the roof opening panel blind.