(M) ×

Published: May 24, 2004


# **Instrument Panel Passenger Side Reinforcement (76.46.32)**


#### Removal

- 1. Remove the instrument panel center reinforcement. For additional information, refer to <u>Instrument Panel Center Reinforcement (76.46.34)</u> (Section 501-12)
- 2. Remove the PAD switch. For additional information, refer to <u>Passenger Air Bag Deactivation (PAD)</u> <u>Switch (76.74.19)</u> (Section 501-20)
- 3 . Remove the glove compartment. For additional information, refer to Glove Compartment (76.52.03) (Section 501-12)
- 4. Remove the closing trim panel.
  - Release the clip.
  - Remove the 2 screws.
  - Disconnect the electrical connector.




5. Remove the passenger side footwell duct.



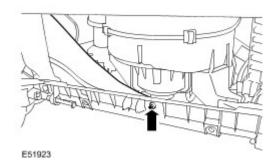


6. Remove the stowage compartment tray.

Release the 4 clips.

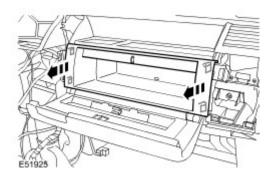


- 7. Remove the instrument panel passenger side reinforcement.
  - Remove the 11 Torx screws.
  - Disconnect the electrical connector.

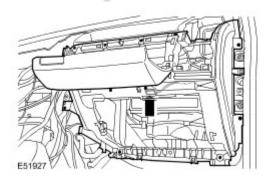


## 8. **NOTE**:

Do not disassemble further if the component is removed for access only. Remove the glove compartment lamp.

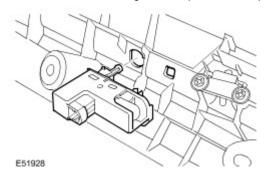

 $9 \,. \hspace{1.5cm} \text{Remove the glove compartment damper.} \\$ 

Remove the Torx screw.

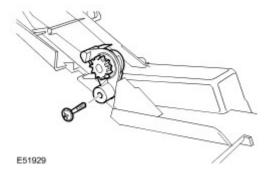


### 10. **NOTE:**


Note the position of the hinge pin and spring prior to removal.


Remove the stowage compartment lid.

- Remove the 2 hinge pins.
- Release the 2 hinge springs.
- Remove the Torx screw and remove the damper.

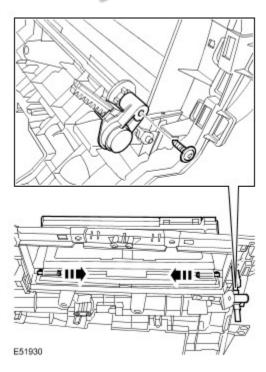

11 . Remove the glove and stowage compartment strikers.



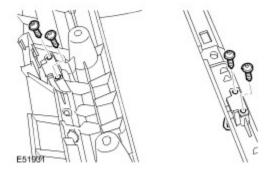

### Installation

- 1. Install the glove compartment damper.
  - Tighten the Torx screw.
- 2. Install the stowage compartment lid.
  - Install the damper and tighten the Torx screw.

- Attach the hinge springs.
- Install the hinge springs.
- 3. Install the glove and stowage compartment strikers.
  - Tighten the screws.
- 4. Install the glove compartment lamp.
- 5. Install the instrument panel passenger side reinforcement.
  - Connect the electrical connector.
  - Tighten the Torx screws.
- 6. Install the passenger side footwell duct.
  - Install the clip.
- 7. Install the closing trim panel.
  - Connect the electrical connector.
  - Secure the clip.
- 8. Install the stowage compartment tray.
  - Secure the clips.
- Install the glove compartment. For additional information, refer to Glove Compartment (76.52.03) (Section 501-12)
- 10 . Install the PAD switch. For additional information, refer to <u>Passenger Air Bag Deactivation (PAD)</u>
  <u>Switch (76.74.19)</u> (Section 501-20)
- 11 . Install the instrument panel center reinforcement. For additional information, refer to <u>Instrument Panel Center Reinforcement (76.46.34)</u> (Section 501-12)