

## Wiring Harnesses - Frame Wiring Harness Vehicles Built From: 01/2007


Removal and Installation

### Removal

All vehicles

**1. NOTE:** All of the clips on the harness can be access with the integrated body installed to the frame. The graphic is to give guidance of the routing of the harness.


The frame wiring harness routing.

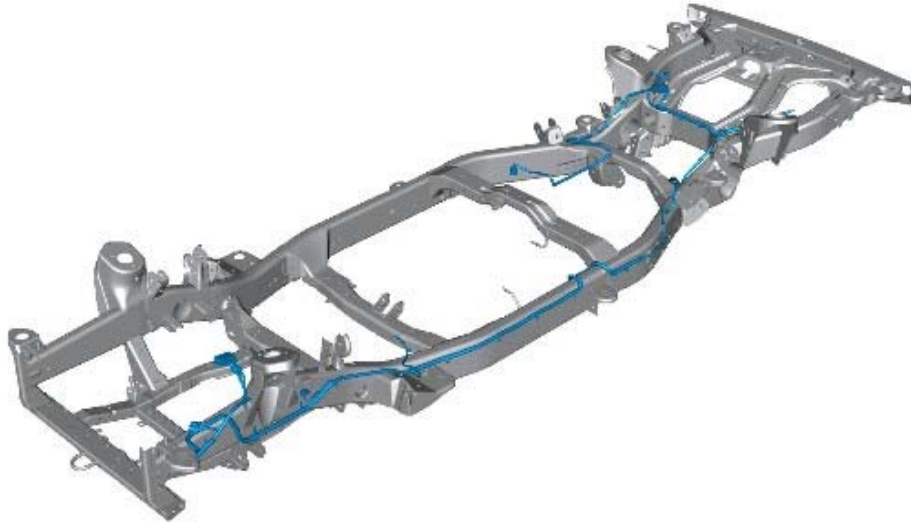

E92590

**2.** Open the upper liftgate and lower tailgate.

**3.** Remove the spare wheel and tire.

**4.**  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

**5.** Remove the wheels and tires.

**6.** Disconnect the battery ground cable.

For additional information, refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

**7.** Remove the LH front wheel arch liner.

For additional information, refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).