



D2 Right Front O2 Sensor Wiring

C0645 Orange O2
sensor front right
connector

C0635
Connector to
ECU

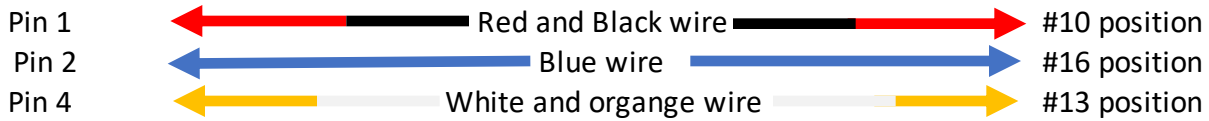


C0203
Connector
near SAI filter
right side of
engine bay
#14 position



C0645


CONNECTOR DETAILS

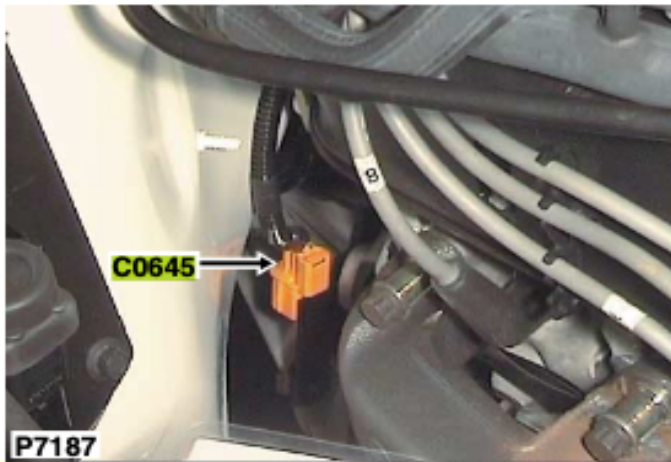

Cav	Col	Cct
1	RB	ALL
2	U	ALL
3	NK	ALL
4	WO	ALL

Description: *Sensor-Heated oxygen (HO2S)-Front-RH*

Location: *Rear RH side of engine*

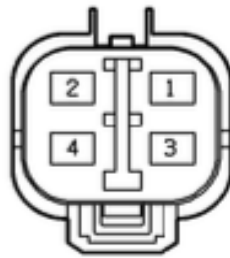


YPC113730

Colour: *ORANGE*

Gender: *Male*


CONNECTOR DETAILS

C0635

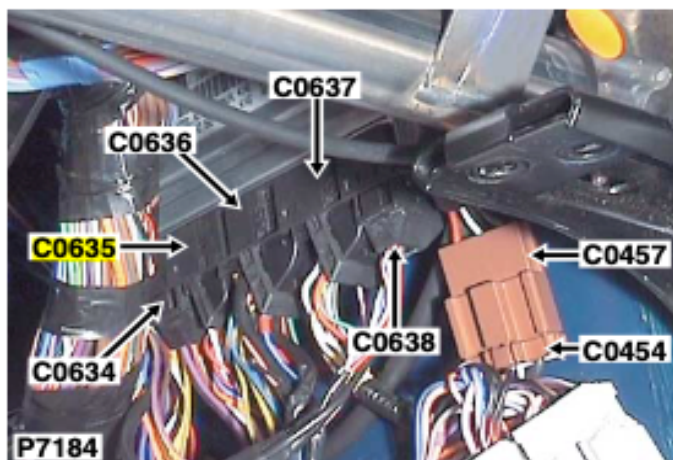

Description: *Engine control module (ECM)*

Location: *Behind RH side of fascia*

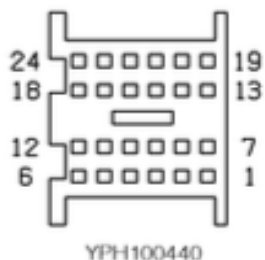


Colour: *BLACK*

Gender: *Female*

Cav	Col	Cct
1	WU	23
5	BG	18
7	WU	23
8	RB	23
9	RB	ALL
10	RB	ALL
11	RB	23
13	WO	ALL
14	G	23
15	O	ALL
16	U	ALL
17	Y	23
18	UP	ALL
19	WO	ALL
21	SG	18
23	UR	ALL
24	KO	18


CONNECTOR DETAILS

C0203

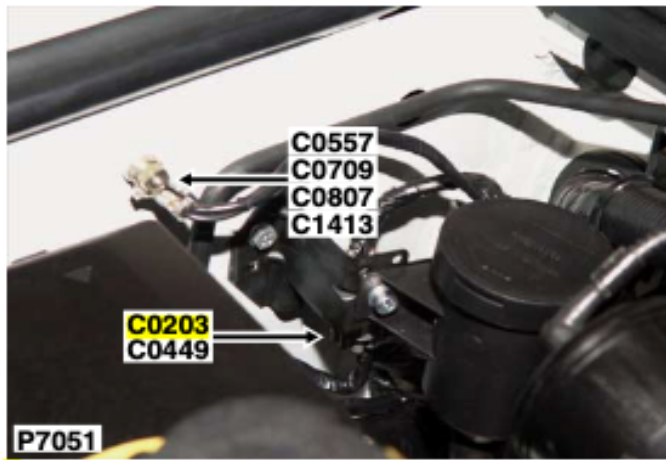

Description: *Engine harness to main harness*
Location: *Rear RH side of engine compartment*

Cav	Col	Cct
1	SY	34
2	RB	34
3	W	ALL
4	GN	ALL
5	GY	ALL
6	SP	ALL
7	WN	ALL
8	GU	ALL
9	NY	ALL
10	UP	ALL
11	RK	ALL
12	KO	18
13	BY	18
14	NK	ALL

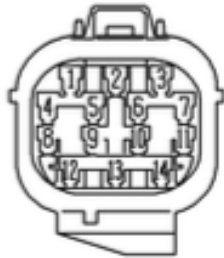

YPC10549

Colour: *GREY*
Gender: *Female*