

A-Pillar Trim Panel (76.13.26)


Removal

1. Release the door weatherstrip to access the A-pillar upper trim panel and instrument panel end panel.



2. Remove the instrument panel end panel.

▶ Release the clip.

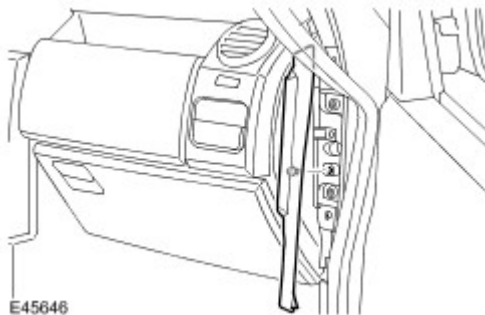


3. Remove the A-pillar upper trim panel.

▶ Release the screw cover.

▶ Remove and discard the Torx screw.

▶ Release the clip.

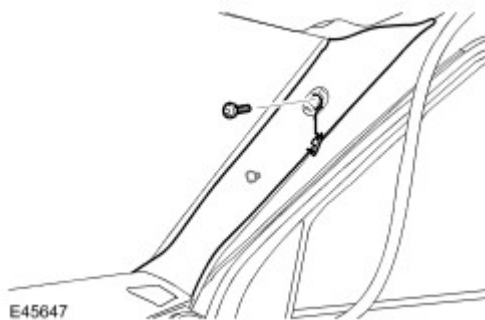


- 4.

NOTE :

Do not disassemble further if the component is removed for access only.

Remove the screw retainer and clip from the A-pillar upper trim panel.

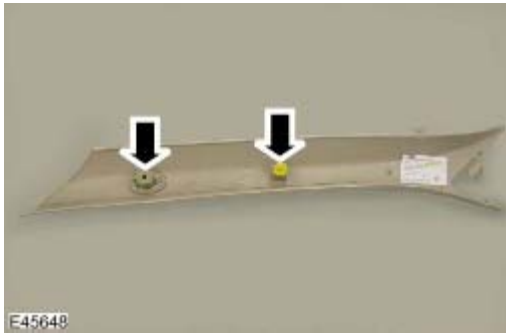

Installation

1. Install the screw retainer and clip to the A-pillar upper trim panel.
2. Install the A-pillar upper trim panel.
 - ▶ Secure with the clip.
 - ▶ Install a new Torx screw and tighten to 3 Nm (2 lb.ft).
 - ▶ Install the screw cover.
3. Install the instrument panel end panel.
 - ▶ Secure with the clip.
4. Attach the door weatherstrip.