

PUBLISHED: 23-JUN-2017
2017.0 DISCOVERY (LR), 501-05

INTERIOR TRIM AND ORNAMENTATION

TAILGATE TRIM PANEL (G2008370)

REMOVAL AND INSTALLATION

76.49.23	CARPET - TAILGATE - RENEW	ALL DERIVATIVES	0.2	USED WITHINS
----------	---------------------------------	--------------------	-----	-----------------

PART(S)

STEP	PART NAME	QUANTITY
Removal Step 3	Retaining clips	14

REMOVAL


CAUTION:

Make sure to protect the paintwork.

NOTE:


Removal steps in this procedure may contain installation details.

1.

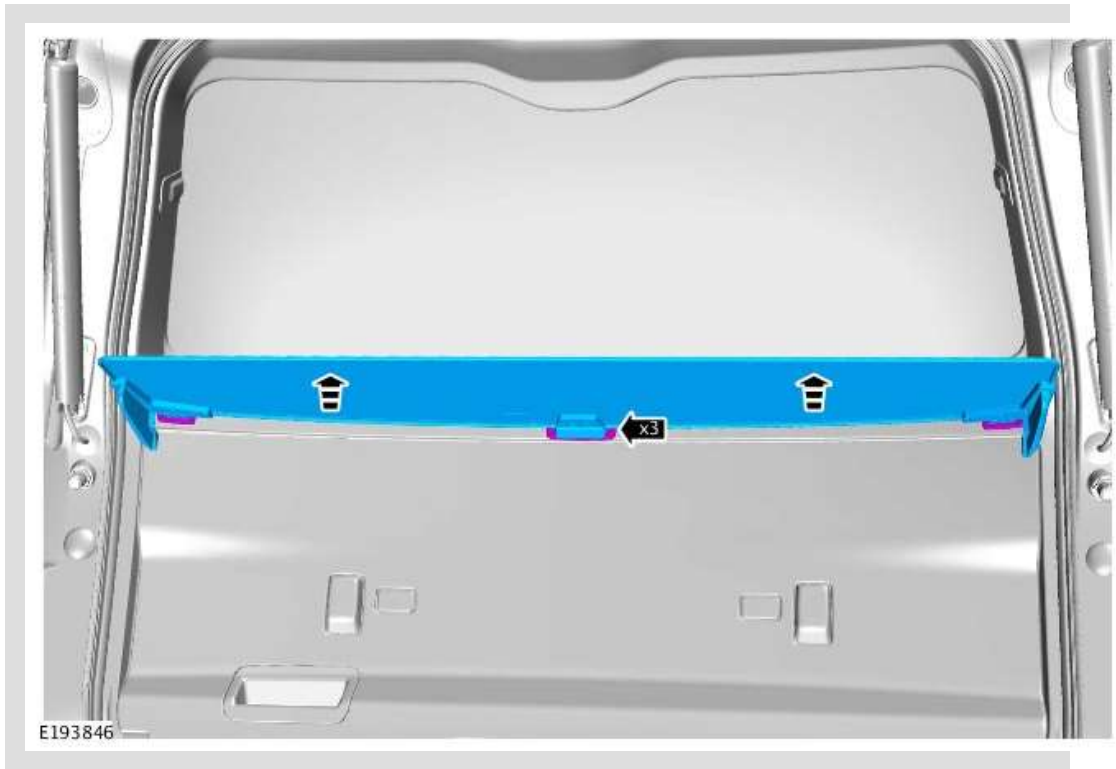

Remove the trim panel.

2.

 NOTE:

Do not remove the component at this stage.



Release the tailgate trim panel.

Torque: **1.3 Nm**

3.

⚠ CAUTION:

Make sure the wiring harness and electrical connectors are not damaged during the tailgate trim panel removal.

△ NOTE:

Do not disassemble further if the component is removed for access only.



Remove the tailgate trim panel.


Renew Part: *Retaining clips* Quantity: 14 .

4.



Remove the switch.

5.

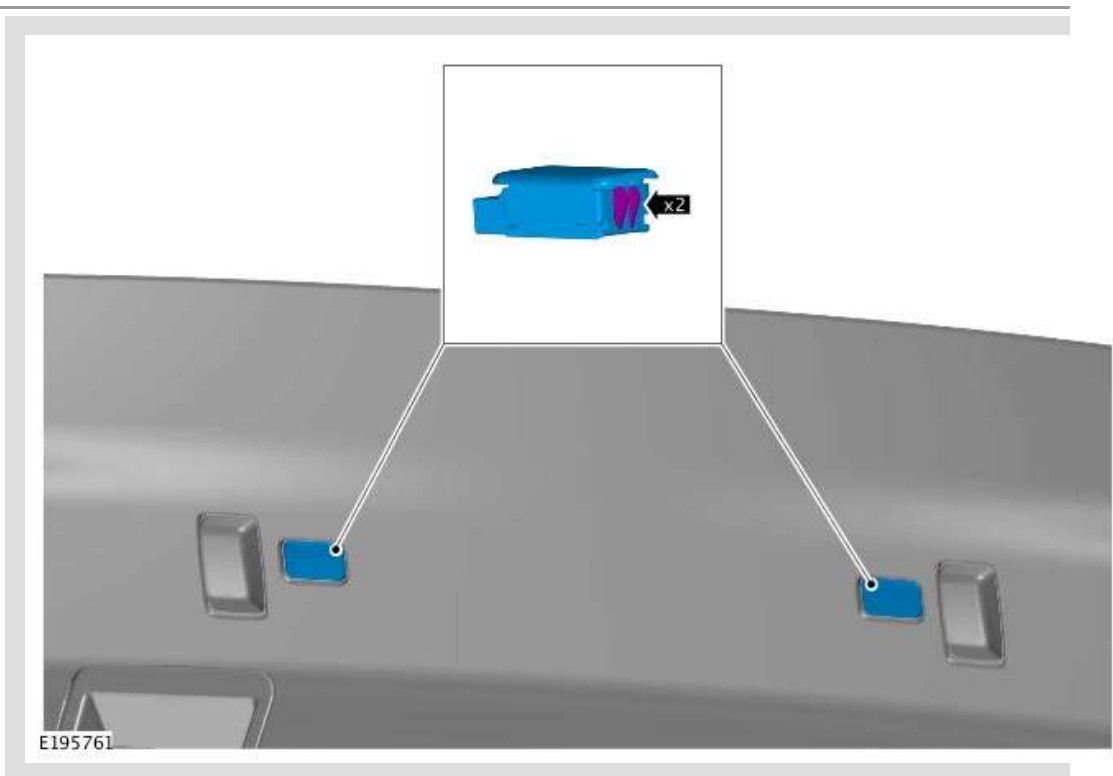

Remove the interior rear lamps.

INSTALLATION

1. To install, reverse the removal procedure.

