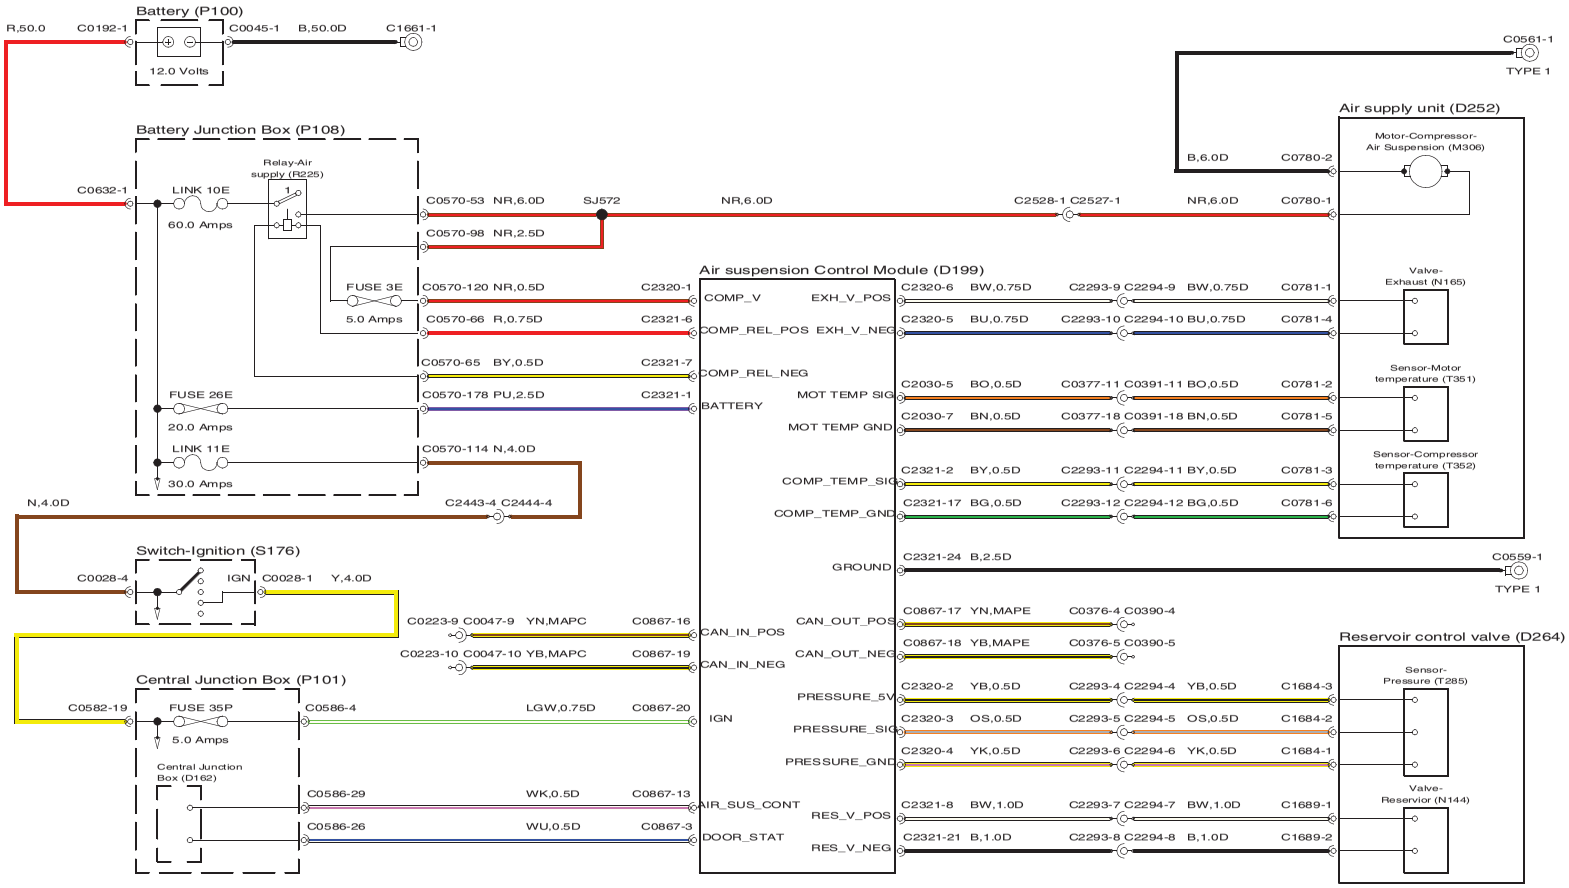
Battery (P100)
R,50.0
C0192-1
C0045-1
B,50.0D
C1661-1
12.0 Volts
Battery Junction Box (P108)
Relay-Air supply (R225)
C0632-1
LINK 10E
60.0 Amps
C0570-53 NR,6.0D
SJ572
NR,6.0D
C2528-1 C2527-1
NR,6.0D
C0780-1
C0570-98 NR,2.5D
FUSE 3E
5.0 Amps
C0570-120 NR,0.5D
C2320-1
C0570-66 R,0.75D
C2321-6
C0570-65 BY,0.5D
C2321-7
FUSE 26E
20.0 Amps
C0570-178 PU,2.5D
C2321-1
LINK 11E
30.0 Amps
C0570-114 N,4.0D
N,4.0D
C2443-4 C2444-4
Switch-Ignition (S176)
C0028-4
IGN
C0028-1
Y,4.0D
C0223-9 C0047-9 YN,MAPC
C0867-16
C0223-10 C0047-10 YB,MAPC
C0867-19
Central Junction Box (P101)
C0582-19
FUSE 35P
5.0 Amps
C0586-4
LGW,0.75D
C0867-20
Central Junction Box (D162)
C0586-29
WK,0.5D
C0867-13
C0586-26
WU,0.5D
C0867-3
Air suspension Control Module (D199)
COMP_V
COMP_REL_POS
COMP_REL_NEG
BATTERY
CAN_IN_POS
CAN_IN_NEG
IGN
AIR_SUS_CONT
DOOR_STAT
EXH_V_POS
EXH_V_NEG
MOT TEMP SIG
MOT TEMP GND
COMP_TEMP_SIG
COMP_TEMP_GND
GROUND
CAN_OUT_POS
CAN_OUT_NEG
PRESSURE_5V
PRESSURE_SIG
PRESSURE_GND
RES_V_POS
RES_V_NEG
C2320-6 BW,0.75D C2293-9 C2294-9 BW,0.75D C0781-1
C2320-5 BU,0.75D C2293-10 C2294-10 BU,0.75D C0781-4
C2030-5 BO,0.5D C0377-11 C0391-11 BO,0.5D C0781-2
C2030-7 BN,0.5D C0377-18 C0391-18 BN,0.5D C0781-5
C2321-2 BY,0.5D C2293-11 C2294-11 BY,0.5D C0781-3
C2321-17 BG,0.5D C2293-12 C2294-12 BG,0.5D C0781-6
C2321-24 B,2.5D
C0867-17 YN,MAPE C0376-4 C0390-4
C0867-18 YB,MAPE C0376-5 C0390-5
C2320-2 YB,0.5D C2293-4 C2294-4 YB,0.5D C1684-3
C2320-3 OS,0.5D C2293-5 C2294-5 OS,0.5D C1684-2
C2320-4 YK,0.5D C2293-6 C2294-6 YK,0.5D C1684-1
C2321-8 BW,1.0D C2293-7 C2294-7 BW,1.0D C1689-1
C2321-21 B,1.0D C2293-8 C2294-8 B,1.0D C1689-2
C0561-1
TYPE 1
Air supply unit (D252)
B,6.0D
C0780-2
Motor-Compressor-Air Suspension (M306)
Valve-Exhaust (N165)
Sensor-Motor temperature (T351)
Sensor-Compressor temperature (T352)
C0559-1
TYPE 1
Reservoir control valve (D264)
Sensor-Pressure (T285)
Valve-Reservoir (N144)