


The circuit diagram downloaded from Topix for the MY2004 NAS is actually the MY2003 and it shows that it is Fuse 33 for the interior illumination but the Owners Manual and sticker by the actual fuse block shows it is Fuse 3.

I also have the Technical Publication DVD for Disco1999-2004 and it refers to the same circuit diagram document (Publication Part No. LRL 0553NAS(3))

46 INTERIOR ILLUMINATION

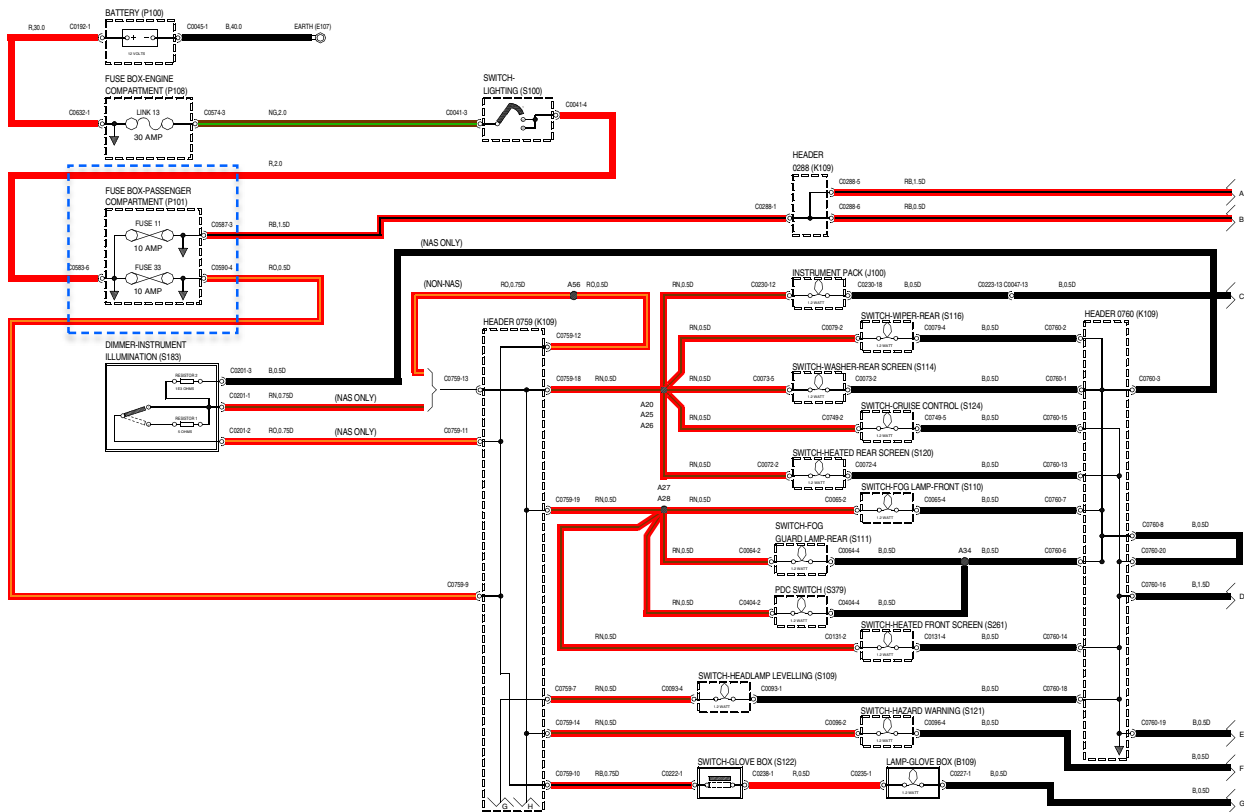

WR10238-A-01


Fuses

Fuse specification

Fuse number	Rating (amps)	Circuit protected
1	25	Central door locking
2	10	Fuel flap release
3	10	Instrument pack Switch illumination
4	10	Fog guard lights - rear
5	10	Headlight high beam - LH
6	25	Air conditioning blower - rear
7	30	Heater blower - front
8	30	Heated rear window Heated mirrors
9	10	Headlight normal beam - LH
10	10	Headlight normal beam - RH
11	10	Side & tail lights - LH Number plate light Switch illumination Trailer socket
12	30	Sunroof
13	30	Electric windows - rear
14	20	Ignition coils
15	20	Cigar lighter Interior lights Seat heaters Vanity mirror illumination
16	15	Clock Radio Park distance control Rear head phones
17	15	Radio amplifier Speakers
18	15	Wiper motor - rear
19	15	Wiper motor - front Screen washer - front
20	15	Interior lights Clock/radio memory Engine remobilisation Compact disc player* Key i/lock Diagnostics





Fuses

Fuse number	Rating (amps)	Circuit protected
21	15	Transfer box Alarm audible warning Shift i/lock
22	10	Headlight high beam - RH
23	10	Starter motor
24	10	Alternator Automatic transmission Engine management
25	15	Brake lights Reverse lights
26	10	Auxiliary circuits relays
27	10	Instruments Hill descent control
28	10	Self levelling suspension Anti-lock braking
29	10	Active cornering enhancement (ACE)
30	20	Cruise control Electric mirrors Screen washer - rear
31	10	Air conditioning blower - front
32	25	Accessory socket
33	10	Side & tail lights - RH Radio Trailer socket Switch illumination
34	30	Electric windows - front
35	10	Airbag SRS - DO NOT REMOVE

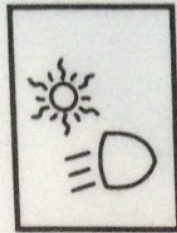

LAND-ROVER

F35
10A **SRS**

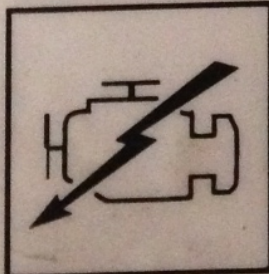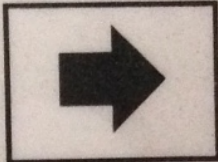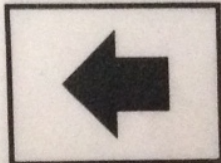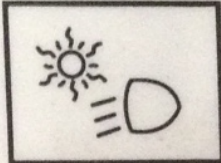

F1	25A	
F2	10A	
F3	10A	
F4	10A	
F5	10A	
F6	25A	
F7	30A	
F8	30A	
F9	10A	
F10	10A	
F11	10A	
F12	30A	
F13	30A	
F14	20A	
F15	20A	
F16	15A	
F17	15A	

F18	15A	
F19	15A	
F20	15A	
F21	15A	
F22	10A	
F23	10A	
F24	10A	
F25	15A	
F26	10A	AUX
F27	10A	
F28	10A	
F29	10A	
F30	20A	
F31	10A	
F32	25A	
F33	10A	
F34	30A	



10A SPARE 15A SPARE 20A SPARE 30A SPARE

