


- **15.** Remove 2 bolts securing manifold gasket and collect gasket clamps.
- 16. Remove inlet manifold gasket.
- 17. Remove gasket seals.

Reassembly

- Clean sealant from cylinder head and from notches in the cylinder block.
- Clean mating faces of cylinder block, cylinder head and manifold.

CAUTION: Do not use a metal scraper or machined surfaces may be damaged.

- **3.** Ensure bolt holes are clean and dry.
- **4.** Apply sealant, Part No. STC 50550 to cylinder head and notches in cylinder block.
- **5.** Fit new gasket seals, ensuring the ends engage correctly in notches.
- **6.** Apply sealant, Part No. STC 50550 to gasket seals above the notches in the cylinder block.
- 7. Fit new manifold gasket, dry.
- 8. Position gasket clamps, fit and lightly tighten holts
- **9.** Position inlet manifold assembly to cylinder head.

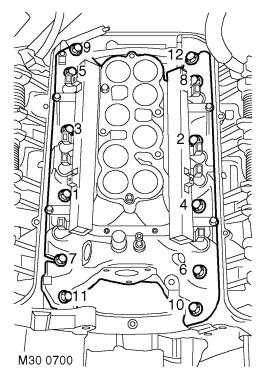

- **10.** Fit manifold bolts and, working in the sequence illustrated, tighten as follows:
 - Initially, tighten bolts numbered 1, 4, 9 and 12 in numerical order to 5 Nm (4 lbf.ft).
 - Inlet manifold bolts initial tighten = 10 Nm (8 lbf.ft).
 - Inlet manifold bolts final tighten = 51 Nm (38 lbf.ft).
 - Tighten inlet manifold gasket clamp bolts to 18 Nm (14 lbf.ft).
 - Tighten inlet manifold bolts to 51 Nm (38 lbf.ft)
- **11.** Clean mating faces of rocker cover and cylinder head, ensure that bolt holes are clean and dry.
- **12.** Fit new rocker cover gaskets, dry, position rocker covers, ensuring gaskets are correctly located.
- **13.** Fit new 'patched' multi-hex rocker cover bolts ensuring that short bolts are on sides of rocker coves nearest centre of engine.
- **14.** Tighten bolts by diagonal selection to:
 - Stage 1 3 Nm (2.5 lbf.ft)
 - Stage 2 8 Nm (6 lbf.ft)
- **15.** Ensure that outer rim of each gasket is correctly positioned around periphery of rocker cover.
- 16. Secure ht leads to rocker cover.
- 17. Clean coolant outlet elbow mating faces.
- 18. Lubricate and fit new 'O' ring to outlet pipe.
- **19.** Position coolant outlet elbow, fit bolts and tighten to 22 Nm (17 lbf.ft).
- **20.** Position alternator, fit mounting bolts and tighten to 45 Nm (34 lbf.ft).