


Gasket - sump

→ 12.60.38


Remove

- 1. Release fixings and remove battery cover.
- 2. Disconnect battery earth lead.
- 3. Remove dipstick.
- 4. Raise the vehicle on a ramp.
- 5. Drain engine oil.


MAINTENANCE, PROCEDURES, Engine oil - V8 engine.

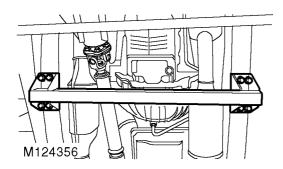


- **6.** Remove 8 bolts securing cross member and remove cross member.
- **7.** Raise front of vehicle under body to increase clearance between engine and front axle.

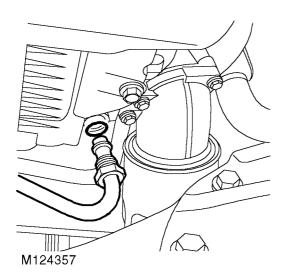


8. Disconnect and release gearbox oil cooler pipe and discard 'O' ring.

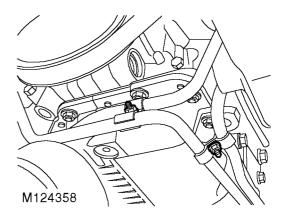

9. Remove 2 clips securing oil cooler pipes at front of sump.

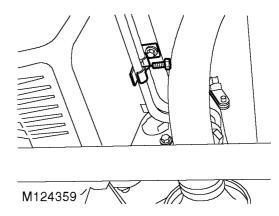

- **10.** Remove clip securing oil cooler pipes to side of sump.
- 11. Remove clip bracket.

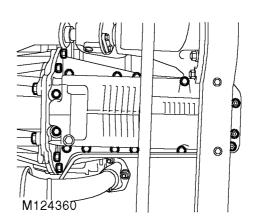


- **12.** Remove 2 forward facing bolts securing sump to bell housing.
- **13.** Remove 4 rear facing bolts securing sump to bell housing.
- 14. Remove 2 bolts in sump recess.
- **15.** Remove 3 nuts securing front of sump.

ENGINE - V8

- **16.** Remove 12 bolts securing sump flange to engine.
- **17.** Manoeuvre sump over front axle and remove sump.
- 18. Discard sump gasket.


Refit

- Clean all traces of sealant from the sump and sump mating faces using a plastic scraper or solvent.
- **2.** Ensure bolt holes in cylinder block are clean and dry.

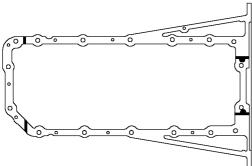

M12 4669

- 3. Apply a 5 mm (0.2 in) wide bead of sealant, Part No. STC 50550, across the cylinder block to front cover joint and across the cylinder block to rear main bearing joint. Apply a globule of sealant to cover the ends of the cruciform seals, (see illustration).
- **4.** Fit new gasket, dry, to sump, ensuring that locating tags are correctly positioned.
- **5.** Manoeuvre sump into position, fit and lightly tighten 2 bolts to retain sump in place, then fit and lightly tighten remainder of bolts.

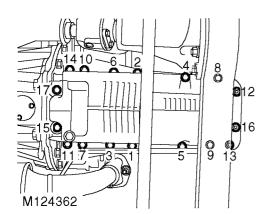

- **6.** Working in the sequence illustrated, tighten the sump bolts to 22 Nm (16 lbf.ft).
- 7. Position side clip bracket, fit and tighten bolt.

- **8.** Position oil cooler pipe clips, fit and tighten nuts.
- **9.** Clean gearbox oil cooler pipe 'O' ring recess and mating face.
- **10.** Lubricate and fit new 'O' ring to gearbox oil cooler pipe.
- 11. Position pipe and tighten nut.
- 12. Lower front of vehicle.
- **13.** Position cross member to chassis, fit bolts and tighten to 25 Nm (18 lbf.ft).
- 14. Refill engine oil and fit dipstick.
- 15. Connect battery earth lead.
- 16. Fit battery cover and retain with fixings.